

INTERNATIONAL

INTERNATIONAL DROP VISORS

15" DROP VISORS FITS I-MODEL 5500I, 5600I, 5900I, 9100I, 9200I, 9400I & 9900I CABS WITH HI-RISE / SKY-RISE PRO SLEEPERS

Replaces factory fiberglass or stainless visor.
(Sold as a kit)

A.			
	Blank (0)	55000	N55000
	SuperNova (8)	55001	N55001
	Crew (8)	55003	N55003
	2" Round Flat (10)	55004	N55004
	2" Round Beehive (10)	55005	N55005
	Challenger (10)	55009	N55009
	Bulls-Eye (10)	55010	N55010
	Fusion (10)	55011C	N55011C
	M1 (8)	55001M1	N55001M1
	M3 (10)	55004M3	N55004M3
	M5 (10)	55009M5	N55009M5



B. 13.8" DROP VISORS FITS I-MODEL CABS WITH LO-ROOF PRO SLEEPERS

Replaces factory fiberglass or stainless visor.
Will not fit Day Cabs. (Sold as a kit)


	Blank (0)	55100	N55100
	SuperNova (8)	55101	N55101
	Crew (8)	55103	N55103
	2" Round Flat (10)	55104	N55104
	2" Round Beehive (10)	55105	N55105
	Challenger (10)	55109	N55109
	Bulls-Eye (10)	55110	N55110
	Fusion (10)	55111C	N55111C
	M1 (8)	55101M1	N55101M1
	M3 (10)	55104M3	N55104M3
	M5 (10)	55109M5	N55109M5



C. 12.5" DROP VISORS FITS LONESTAR AND PROSTAR WITH HI-RISE PRO SLEEPERS

Replaces factory fiberglass or stainless visor.
(Sold as a kit)


	Blank (0)	55220	N55220
	SuperNova (8)	55221	N55221
	Crew (8)	55223	N55223
	2" Round Flat (10)	55224	N55224
	2" Round Beehive (10)	55225	N55225
	Challenger (10)	55229	N55229
	Bulls-Eye (10)	55230	N55230
	Bulls-Eye (10) ID Pattern	55230ID	N55230ID
	Fusion (10)	55231C	N55231C
	M1 (8)	55221M1	N55221M1
	M3 (10)	55224M3	N55224M3
	M5 (10)	55229M5	N55229M5

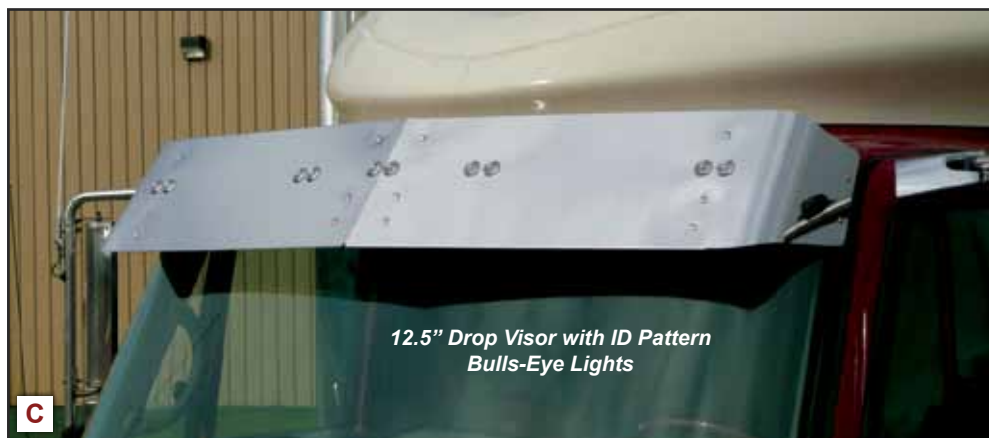

D. 10.5" DROP VISORS FITS 4000, 7000, AND 8000 SERIES DAY CABS WITHOUT FACTORY VISOR

[2002 & Newer] (Sold as a kit)

	Blank (0)	55120	N55120
	SuperNova (8)	55121	N55121
	Crew (8)	55123	N55123
	2" Round Flat (10)	55124	N55124
	2" Round Beehive (10)	55125	N55125
	Challenger (10)	55129	N55129
	Bulls-Eye (10)	55130	N55130
	Bulls-Eye (10) ID Pattern	55130ID	N55130ID
	Fusion (10)	55131C	N55131C
	M1 (8)	55121M1	N55121M1
	M3 (10)	55124M3	N55124M3
	M5 (10)	55129M5	N55129M5

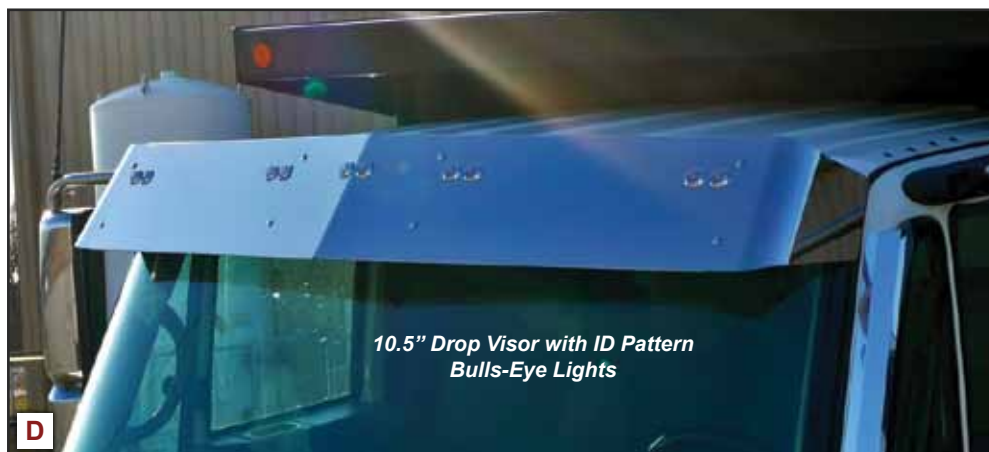



10.5" Drop Visor with ID Pattern
Bulls-Eye Lights

E

E. 10.5" DROP VISORS FITS 4000, 7000, AND 8000 SERIES DAY CABS WITH FACTORY VISOR. Replaces factory fiberglass or stainless visor. [2002 & Newer] (Sold as a kit)

Blank (0)	55140	N55140
SuperNova (8)	55141	N55141
Crew (8)	55143	N55143
2" Round Flat (10)	55144	N55144
2" Round Beehive (10)	55145	N55145
Challenger (10)	55149	N55149
Bulls-Eye (10)	55150	N55150
Bulls-Eye (10) <i>ID Pattern</i>	55150ID	N55150ID
Fusion (10)	55151C	N55151C
M1 (8)	55141M1	N55141M1
M3 (10)	55144M3	N55144M3
M5 (10)	55149M5	N55149M5

F. 9300 / NON I-MODEL DROP VISORS
Replaces factory fiberglass or stainless visor. Fits trucks with wipers on the bottom of windshield. [1989-1999] (Sold as a kit)



9300 / Non I-Model Drop Visor

F

13.5" Drop Visor	55200	N55200
13.5" Louvered Drop Visor	55200L	N55200L
Monster Drop Bow-Tie Visor	55201	N55201
11" Drop Visor	55202	N55202
11" Louvered Drop Visor	55202L	N55202
Regular Drop Bow-Tie Visor	55203	N55203

9300 / NON I-MODEL DROP VISORS
Replaces factory fiberglass or stainless visor. Fits trucks with wipers on the top of windshield. [1989-1999] (Sold as a kit)

13.5" Drop Visor	55190	N55190
13.5" Louvered Drop Visor	55190L	N55190L
Monster Drop Bow-Tie Visor	55191	N55191
11" Drop Visor	55192	N55192
11" Louvered Drop Visor	55192L	N55192L
Regular Drop Bow-Tie Visor	55193	N55193



INTERNATIONAL

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.