

FLAT TOP BLIND MOUNT VISORS

Fits 325, 330, 335, 337, 340, 347, 348, 357, 365, 367, 375, 377, 378, 379, 382, 384, 385, 386, 388 and 389. Add an "L" to your part number to order a louvered visor. (Kit)

CAB MOUNTED MIRRORS [2005 & Newer]

- A. Blind Mount 13.5" Drop Visor

35026 N35026

Blind Mount Monster Drop Bow-Tie Visor

35034 N35034

Blind Mount 11" Drop Visor

35027 N35027

- B. Blind Mount Regular Drop Bow-Tie Visor

35035 N35035

FLAT TOP BLIND MOUNT VISORS

Fits 330, 335, 340, 357, 365, 367, 378, 379, 385, 388 and 389. Add an "L" to your part number to order a louvered visor. (Kit)

DOOR MOUNTED MIRRORS [1988-2005]

13.5" Blind Mount Drop Visor

35028 N35028

- C. Blind Mount Monster Drop Bow-Tie Visor

35036 N35036

- D. 11" Blind Mount Drop Visor

35029 N35029

Blind Mount Regular Drop Bow-Tie Visor

35037 N35037



Blind Mount 13.5" Drop Visor



Blind Mount Regular Drop Bow-Tie Visor



Blind Mount Monster Drop Bow-Tie Visor



11" Blind Mount Drop Visor



E

Blind Mount Monster Drop Bow-Tie Visor



F

11" Blind Mount Drop Visor



G

Blind Mount Monster Drop Bow-Tie Visor



H

Blind Mount 13.5" Drop Visor

ULTRACAB BLIND MOUNT VISORS
 Fits 377, 378, 379, 384, 385, 386, 388 and 389.
 Add an "L" to your part number to order a louvered visor.
 (Kit)

CAB MOUNTED MIRRORS [2005 & Newer]

14.5" Blind Mount Drop Visor

35022 N35022

E. Blind Mount Monster Drop Bow-Tie Visor

35030 N35030

F. 11" Blind Mount Drop Visor

35023 N35023

G. Blind Mount Regular Drop Bow-Tie Visor

35031 N35031

DOOR MOUNTED MIRRORS [1995-2005]

H. 14.5" Blind Mount Drop Visor

35024 N35024

Blind Mount Monster Drop Bow-Tie Visor

35032 N35032

11" Blind Mount Drop Visor

35025 N35025

Blind Mount Regular Drop Bow-Tie Visor


35033 N35033

PETERBILT

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

FLAT TOP VISORS

Fits 325, 330, 335, 337, 340, 347, 348, 357, 365, 367, 375, 377, 378, 379, 382, 384, 385, 388 and 389. Add an "L" to your part number to order a louvered visor. (Kit)

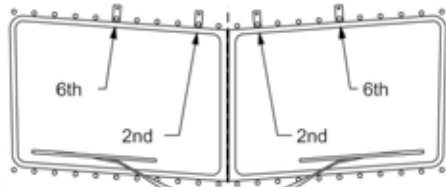

[1988 & Newer] Flat Top Factory Bracket Locations

CAB MOUNTED MIRRORS [2005 & Newer]

Factory-Style Extended 11" Visor

35061 **N35061**

A. 13.5" Drop Visor

35057 **N35057**

Monster Drop Bow-Tie Visor

35058 **N35058**

B. 11" Drop Visor

35059 **N35059**

C. Regular Drop Bow-Tie Visor

35060 **N35060**

DOOR MOUNTED MIRRORS [1988 & 2005]

11" Factory-Style Extended Visor

35055 **N35055**

D. Factory-Style Replacement Visor

35050 **N35050**

13.5" Drop Visor

35051 **N35051**

E. Monster Drop Bow-Tie Visor



35052 **N35052**


11" Drop Visor

35053 **N35053**


Regular Drop Bow-Tie Visor

35054 **N35054**

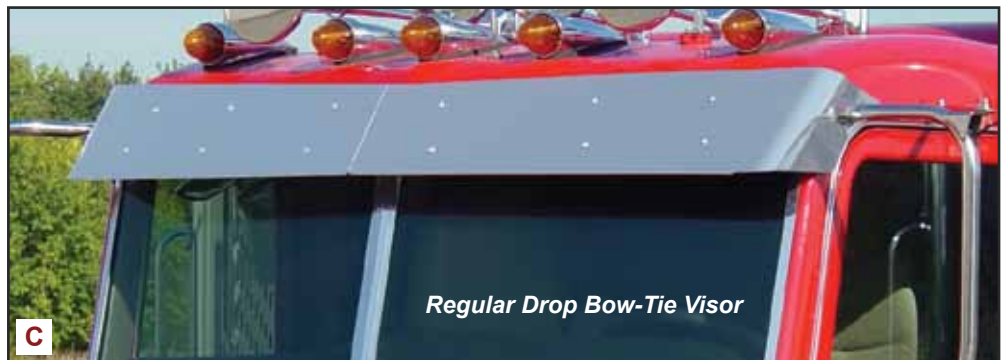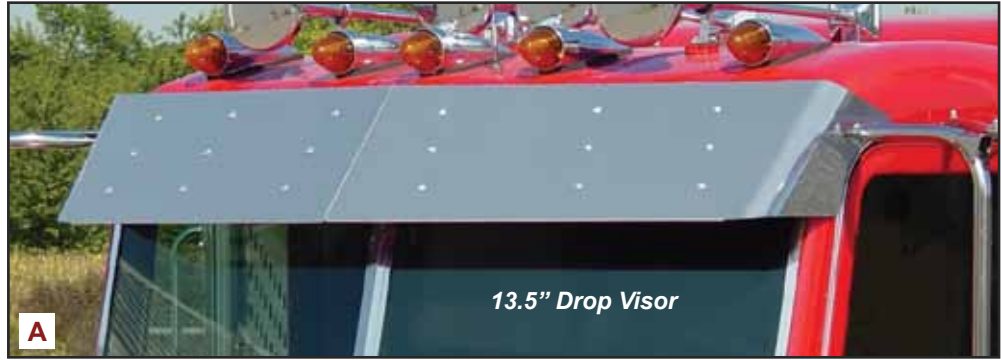

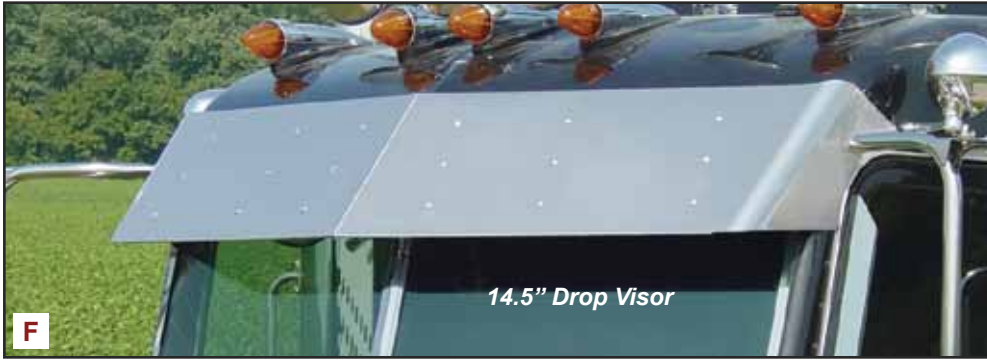

ULTRACAB VISORS
Add an "L" to your part number to order a louvered visor. (Kit)

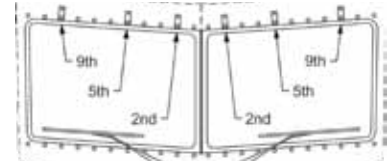

[2002 & Newer] UltraCab Factory Bracket Locations

CAB MOUNTED MIRRORS [2005 & Newer]
Fits 335, 357, 377, 378, 379, 385, 388, and 389.

- F.** 14.5" Drop Visor
35018 **N35018**

- G.** Monster Drop Bow-Tie Visor
35019 **N35019**

- H.** 11" Drop Visor
35020 **N35020**

- I.** Regular Drop Bow-Tie Visor
35021 **N35021**

DOOR MOUNTED MIRRORS [2002-2005]
Fits 357, 378, 379, and 385.


- J.** 11" Factory-Style Extended Visor
35012 **N35012**

- 14.5" Drop Visor
35013 **N35013**

- Monster Drop Bow-Tie Visor
35014 **N35014**

- 11" Drop Visor
35015 **N35015**

- Regular Drop Bow-Tie Visor
35016 **N35016**

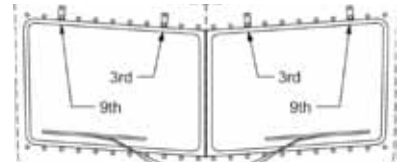

[1999-2001] UltraCab Factory Bracket Locations

DOOR MOUNTED MIRRORS [1999-2001]
Fits 357, 377, 378, 379, and 385.


- 11" Factory-Style Extended Visor
35000 **N35000**

- 14.5" Drop Visor
35001 **N35001**

- Monster Drop Bow-Tie Visor
35002 **N35002**

- 11" Drop Visor
35003 **N35003**

- Regular Drop Bow-Tie Visor
35004 **N35004**

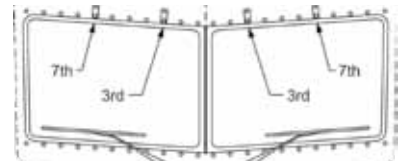

[1998 & Earlier] UltraCab Factory Bracket Locations

DOOR MOUNTED MIRRORS [1998 & Earlier]
Fits 357, 377, 378, 379, and 385.

- 11" Factory-Style Extended Visor
35006 **N35006**

- 14.5" Drop Visor
35007 **N35007**

- Monster Drop Bow-Tie Visor
35008 **N35008**

- 11" Drop Visor
35009 **N35009**

- Regular Drop Bow-Tie Visor
35010 **N35010**

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

DARWIN VISOR

Fits 325, 330, 335, 337, 340, 347, 348, 357, 365, 367, 375, 377, 378, 379, 382, 384, 385, 386, 388 and 389. Fits UltraCab and Flat Top. (Kit)

A. CAB MOUNTED MIRRORS [2005 & Newer]

10.5" Blind Mount Darwin Visor

35570 N35570

Blind Mount Darwin Bow-Tie Visor

35582 N35582

B. DOOR MOUNTED MIRRORS [2004 & Earlier]

10.5" Blind Mount Darwin Visor

35571 N35571

Blind Mount Darwin Bow-Tie Visor

35583 N35583



10.5" Blind Mount Darwin Drop Visor



10.5" Blind Mount Darwin Drop Visor

359 DARWIN VISOR [1973 - 1987]

Replaces factory visor. (Kit)

10.5" Blind Mount Darwin Visor


35590 N35590

Blind Mount Darwin Bow-Tie Visor

35591 N35591

359 STANDARD MOUNT VISOR

Also fits 340, 348, 349, 358 and 359. (Kit)

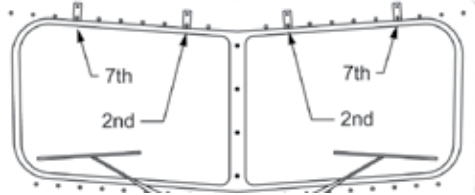

[1973 & Newer] 359 Factory Bracket Locations

13" Drop Visor

35041 N35041

Monster Drop Bow-Tie Visor

35043 N35043

11" Drop Visor

35040 N35040

Old School Bow-Tie Visor

35042 N35042



13" Blind Mount Drop Visor

359 BLIND MOUNT VISOR

(Kit)

C. 13" Blind Mount Drop Visor

35046 N35046

Monster Drop Blind Mount Bow-Tie Visor

35049 N35049

D. 11" Blind Mount Drop Visor

35045 N35045

Blind Mount Regular Drop Bow-Tie Visor

35048 N35048

E. Blind Mount Old School Bow-Tie Visor

35047 N35047



11" Blind Mount Drop Visor



Blind Mount Old School Bow-Tie Drop Visor



MULTI-FIT ULTRACAB AND FLAT TOP BLIND MOUNT VISORS
 Fits 357, 367, 377, 378, 379, 384, 385, 386, 388 and 389. (Kit)

- CAB MOUNTED MIRRORS** [2005 & Newer]
- F.** 14" Blind Mount Drop Visor
35075 N35075

 - G.** Blind Mount Monster Drop Bow-Tie
35076 N35076
 11" Blind Mount Drop Visor
35077 N35077

 - H.** Blind Mount Regular Bow-Tie Visor
35078 N35078
 Blind Mount Super Untie Visor
35085 N35085

DOOR MOUNTED MIRRORS [1988-2005]

- 14" Blind Mount Drop Visor
35070 N35070

- Blind Mount Monster Drop Bow-Tie
35071 N35071

- 11" Blind Mount Drop Visor
35072 N35072

- Blind Mount Regular Bow-Tie Visor
35073 N35073

- I.** Blind Mount Super Untie Visor
35080 N35080

1-PIECE CURVED WINDSHIELD VISOR
 Fits 379. Please call **RoadWorks** customer service for more information at 1-800-448-8741.

- 13" Drop Visor - [1995-2005]
35090 N35090

- 10" Drop Visor - [1995-2005]
35091 N35091


N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

WINDSHIELD TRIM

Fits 325, 330, 335, 337, 340, 347, 348, 357, 365, 367, 375, 377, 378, 379, 382, 384, 385, 386, 388 and 389. [1988 & Newer]

- A. Fits 2-piece Windshield (3-piece kit)
30109 N30109

- B. Old School 2-piece Windshield Trim (2-piece kit)
31111 N31111

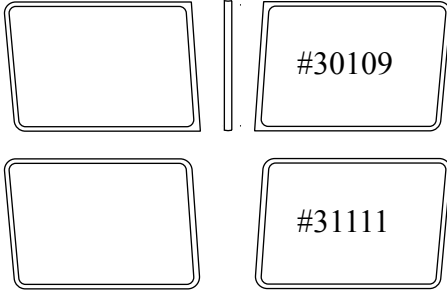

Windshield Trims Diagrams



Call RoadWorks Customer Service at 1-800-448-8741 for additional Windshield Trim options.

PETERBILT WIPER ARM COVERS

Will not fit cab over or 387 / 587. [1988 & Newer] (Pair)

- C. Wiper Arm Covers
30046 N30046

- D. **387 / 587 SLEEPER TRUCK VISORS**
 Replaces factory visor. (Kit)
 20" Drop Visor
35501 N35501
 Monster Drop Bow-Tie Visor
35502 N35502

- 18" Drop Visor
35510 N35510
 Regular Drop Bow-Tie Visor
35511 N35511



E. 387 / 587 DAY CAB VISORS

Replaces factory visor. (Kit)

- 12" Drop Visor
35503 N35503

- Monster Drop Bow-Tie Visor
35504 N35504

- 10" Drop Visor
35512 N35512
 Regular Drop Bow-Tie Visor
35513 N35513

