



**CLASSIC / FLD FLAT TOP UNTIE VISORS**

Replaces factory stainless visor. If no existing visor or if replacing factory fiberglass visor you will also need Bracket Kit 25000-08 in addition to your visor. Add an "L" after your part number to order a louvered visor. [1995-2009] (Kit)

**CLASSIC / FLD FLAT TOP UNTIE DROP VISOR**

G.	Door Mounted Mirrors	25004	N25004
H.	Cab Mounted Mirrors	25024	N25024

**BRACKET KITS**

If no existing visor or if replacing factory fiberglass visor you will need Bracket Kit 25000-08 in addition to above visors. Does not fit integral fit / car hauler. For integral flat top / car hauler, use 25000-08CH below. (Kit)

Fiberglass Visor Replacement Bracket Kit	25000-08	N25000-08
Fiberglass Visor Replacement Bracket Kit	25000-08CH	N25000-08CH


**CLASSIC / FLD CONDO UNTIE DROP VISOR**

Blank (0)	25320UT	N25320UT
Supernova (8)	25321UT	N25321UT
Crew (8)	25323UT	N25323UT
I. 2" Round Flat (10)	25324UTB	N25324UTB
2" Round Beehive (10)	25325UTB	N25325UTB
Challenger (10)	25329UTB	N25329UTB
Bulls-Eye (10)	25330UTB	N25330UTB
Bulls-Eye (10) ID Pattern	25332UTBID	N25332UTBID
3/4" Button (10)	25330UTGB	N25330UTGB
Fusion (10)	25331UTBC	N25331UTBC
M1 (8)	25321UTM1	N25321UTM1
M3 (10)	25324UTM3	N25324UTM3
M5 (10)	25329UTM5	N25329UTM5
Mini (10)	25329UTMN	N25329UTMN

**FREIGHTLINER CENTURY / COLUMBIA CONDO / MID-ROOF UNTIE VISORS**

Does not replace stainless steel day cab visor. **For trucks with 2 bolts per visor side.** (2003 & Earlier) (Kit)

Blank (0)	25520UT	N25520UT
Supernova (8)	25521UT	N25521UT
Crew (8)	25523UT	N25523UT
2" Round Flat (10)	25524UTB	N25524UTB
2" Round Beehive (10)	25525UTB	N25525UTB
Challenger (10)	25529UTB	N25529UTB
J. Bulls-Eye (10)	25530UTGB	N25530UTGB
Bulls-Eye (10) ID Pattern	25530UTBID	N25530UTBID
3/4" Button (10)	25530UTB	N25530UTB
Fusion (10)	25531UTBC	N25531UTBC
M1 (8)	25521UTM1	N25521UTM1
M3 (10)	25524UTM3	N25524UTM3
M5 (10)	25529UTM5	N25529UTM5
Mini (10)	25529UTMN	N25529UTMN

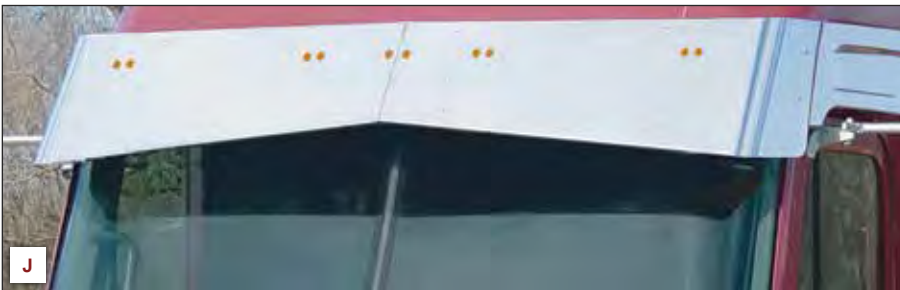

See Image F Previous Page for 2 Bolt Visor Example.

**FREIGHTLINER CENTURY / COLUMBIA / CORONADO CONDO / MID-ROOF UNTIE VISORS**

Does not replace stainless steel day cab visor. **For trucks with 3 bolts per visor side.** (2004 & Newer) (Kit)

Blank (0)	25560UT	N25560UT
Supernova (8)	25561UT	N25561UT
Crew (8)	25563UT	N25563UT
2" Round Flat (10)	25564UTB	N25564UTB
2" Round Beehive (10)	25565UTB	N25565UTB
Challenger (10)	25569UTB	N25569UTB
K. Bulls-Eye (10)	25570UTBC	N25570UTBC
Bulls-Eye (10) ID Pattern	25570UTBCID	N25570UTBCID
3/4" Button (10)	25570UTGB	N25570UTGB
Fusion (10)	25571UTBC	N25571UTBC
M1 (8)	25561UTM1	N25561UTM1
M3 (10)	25564UTM3	N25564UTM3
M5 (10)	25569UTM5	N25569UTM5
Mini (10)	25569UTMN	N25569UTMN



See Image E Previous Page for 3 Bolt Visor Example.

\*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.