

SLEEPER DOOR LATCH TRIMS [2006 & Newer]
(Pair)

A. 1 - Door Latch Surrounds		
30581	N30581	
2 - Door Latch Covers		
30580	N30580	

See pages 134 - 135 for sleeper panels.

FAIRING TRIMS


Call RoadWorks Customer Service at 1-800-448-8741 for information about Fairing Trims for 579.

3 - Upper Fairing Trim (Pair)		
4 - Lower Fairing Trim (Pair)		



SLEEPER VENT TRIM SURROUND (Each)

B. 1 - Dimpled Vent Surround		
30118	N30118	
Dimpled Vent Surround With Flames		
30153	N30153	

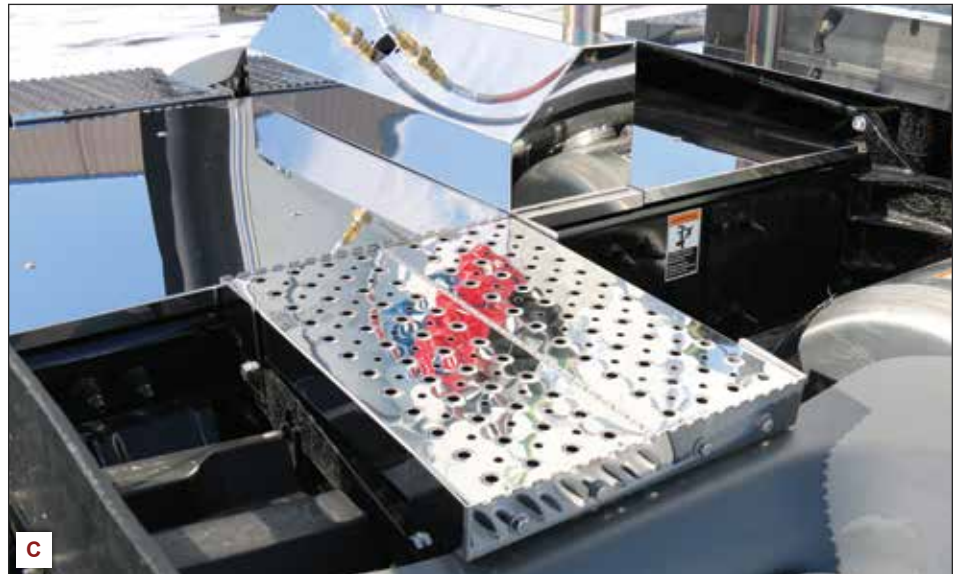

579 CUSTOM DECK PLATES (Each)

C. Custom Deck Plates For Your Peterbilt.

Call RoadWorks Customer Service at 1-800-448-8741 for information about Custom Deck Plates for 579.

BACK OF SLEEPER ACCESSORIES

D. 1 - Back of Sleeper Vent Covers (Pair)		
39055	N39055	

SLEEPER SHOCK COVERS (Pair)

2 - Blank (0)	39080	N39080
Supernova (5)	39081	N39081
Crew (5)	39083	N39083
2" Round Flat (8)	39084B	N39084B
2" Round Beehive (8)	39085B	N39085B
Challenger (8)	39089B	N39089B
Bulls-Eye (8)	39090B	N39090B
Fusion (8)	39091BC	N39091BC
M1 (5)	39081M1	N39081M1
M3 (8)	39084M3	N39084M3
M5 (8)	39089M5	N39089M5
Mini (8)	39089MN	N39089MN
3/4" Button (8)	39090GB	N39090GB

