



I

**387 UNDER BUMPER BAR**

Mounts to chrome bumper. (2-piece kit)

	Blank (0)	30940	N30940
I.	2" Flat (20)	30944B	N30944B
	Fusion (20)	30941BC	N30941BC
	Bulls-Eye (20)	30942B	N30942B
	3/4" Button (20)	30942GB	N30942GB
	M3 (20)	30944M3	N30944M3


**387 SLEEPER WINDOW TRIM (Pair)**

	Sleeper Upper Window Trims	
J.	30900	N30900
	Sleeper Lower Window Trims	
	30901	N30901

**CONTOURED CHANNEL SIDE TURN SIGNAL**

Mounts to bottom of 37600 series sleeper lights.

	(1) Oval Light w/ Chrome Bezel (Each)	
K.	11551B	N11551B

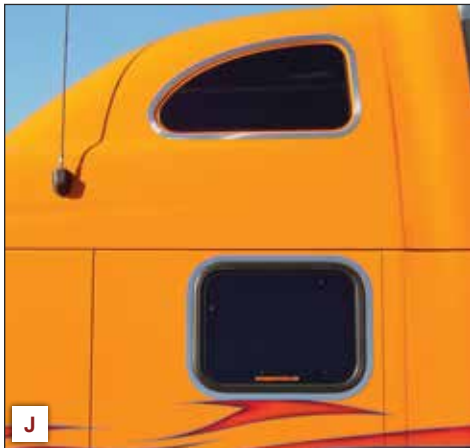

J



K

**387 REAR INNER VERTICAL EXTENSIONS**

L. Peterbilt Sleeper Rear Inner Vertical Extensions

Please call **RoadWorks** customer service for more information at 1-800-448-8741.

**REAR FRAME COVERS**

Fits 330, 335, 340, 347, 348, 357, 365, 367, 377, 378, 379, 382, 384, 385, 387, 388 and 389.

Without Cut Out  
Fits Steel Cross Member.  
**30061**    **N30061**

With Cut Out  
Fits Steel Cross Member.  
**30062**    **N30062**

Without Cut Out  
Fits Aluminum Cross Member.  
**30054**    **N30054**



L

N \*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.