



**ABOVE DOOR TRIMS**

Fits Classic Condo. (Pair)

Also shown on page 9.

- I. **1** - Cab mounted mirrors, tape mount.  

<b>20070</b>	<b>N20070</b>
--------------	---------------
- Door mounted mirrors, tape mount.  

<b>20072</b>	<b>N20072</b>
--------------	---------------

**UNDER WINDOW TRIMS** (Pair)

Door mounted mirrors  

<b>20147</b>	<b>N20147</b>
--------------	---------------

**2** - Cab mounted mirrors  

<b>20148</b>	<b>N20148</b>
--------------	---------------

**DOOR HANDLE TRIMS** (Pair)

**3** - Blank  

<b>23090</b>	<b>N23090</b>
--------------	---------------

With flames  

<b>20459</b>	<b>N20459</b>
--------------	---------------

**VIEW WINDOW TRIMS** (Each)

**4** - Blank  

<b>20104</b>	<b>N20104</b>
--------------	---------------

With flames  

<b>20105</b>	<b>N20105</b>
--------------	---------------

**KICK PANELS** Fits Classic only. (Pair)

With drivers side heater plug hole and dimples  

<b>20440</b>	<b>N20440</b>
--------------	---------------

**5** - Blank with dimples  

<b>20441</b>	<b>N20441</b>
--------------	---------------

**42.8" BATTERY AND TOOL BOX COVERS**

Non DPF trucks. (Each)

Blank cover  

<b>20155</b>	<b>N20155</b>
--------------	---------------

**6** - Louvered cover  

<b>20156</b>	<b>N20156</b>
--------------	---------------

**31" BATTERY AND TOOL BOX COVERS**

Non DPF trucks. (Kit)

Tool Box Cover, blank  

<b>20150</b>	<b>N20150</b>
--------------	---------------

J. **1** - Battery Box Cover, blank  

<b>20151</b>	<b>N20151</b>
--------------	---------------

Tool Box Cover, louvered  

<b>20152</b>	<b>N20152</b>
--------------	---------------


Battery Box Cover, louvered  

<b>20153</b>	<b>N20153</b>
--------------	---------------



See Page 20 for Cab and Cowl Panels.

See Page 27 for Classic/FLD Top of Door Chopped Look Trims.

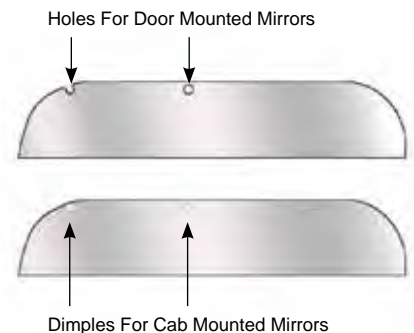

**N** \*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.