


If your truck does not look like the truck in the image please call RoadWorks Customer Service at 1-800-448-8741 to verify fit.

K100 CAB OVER VISOR

- A. 1 - Blind Mount 11" Drop Visor (Kit)**
45090 N45090

K100 CAB OVER GRILLE INSERT

- 2 - Punch Grille Insert (Each)**
45290-XX 45290-XX

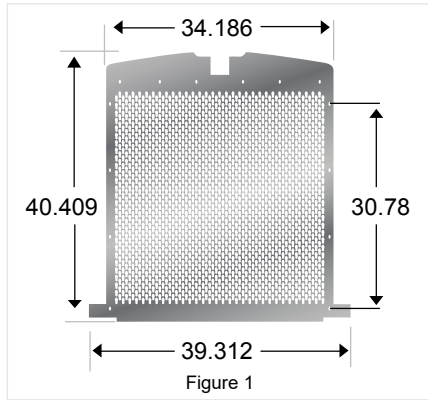

Replace **XX** in the part number with a style from the punch options table. Verify measurements from figure 1.

PUNCH OPTIONS

View punch styles inside back cover.

- 20 Keyholes
- 23 Small 1/4" Circles (Shown)
- 24 Large 7/16" Circles
- 28 Hexagons
- 30 Horizontal Rectangles
- 31 Vertical Rectangles
- 32 5/16" In-Line Squares
- 33 5/16" Offset Squares
- 36 Horizontal Ovals
- 37 Vertical Ovals
- 38 Horizontal 3/16" Oblong
- 39 Vertical 3/16" Oblong
- 40 Horizontal 5/16" Oblong
- 41 Vertical 5/16" Oblong
- 46 Stars
- 47 Snake Skin

3 - Please call RoadWorks customer service for different bumper sizes at 1-800-448-8741. (Each)

B. K100 Intake Trim [See punch options above.] (Each)

40719-XX 40719-XX

K100 Headlight Visor
 Fits double rectangular headlights. (Pair)

C. 10825 N10825

K100 Below Door Cab Entry Steps & Step Guards (Kit)

D. 40705 N40705

VENT TRIMS (Each)

E. 1 - Vent Surround Trim
 Dimple surround.

40108 N40108

2 - Vent Cover
 Blank cover with sides, 4.75" x 10.25".

40097 N40097

DOOR HANDLE TRIMS Non-daylite cab and studio sleeper storage door handle trims. (Pair)

Cab And Storage Door Handle Trim

F. 40113 N40113

