




9900I / IX BATTERY, TOOL BOX TRIMS AND LOWER STEP BARS (Each)

- G.** **1** - 48.3" Battery and Tool Box Cover With Hardware [2000-2004]
50070 **N50070**
-
- 2** - Battery Or Tool Box Step Edge Trim 43" x 1.63"
50072 **N50072**
-
- 3** - Battery Or Tool Box Step Edge Trim 46.25" x 1.63"
50073 **N50073**
-
- H.** **1** - 47.2" Lower Step Bars With Louvers (Pair)
54119 **N54119**
-
- 2** - 48.3" Battery Or Tool Box Cover With Louvers and Hardware. [2000-2004]
50071 **N50071**

47.2" LOWER STEP BARS (Pair)

Blank (0)	54100	N54100
I. SuperNova (10)	54101	N54101
Crew (10)	54103	N54103
2" Round Flat (14)	54104B	N54104B
2" Round Beehive (14)	54105B	N54105B
Challenger (14)	54109B	N54109B
Bulls-Eye (14)	54110B	N54110B
3/4" Button (14)	54110GB	N54110GB
Fusion (14)	54111BC	N54111BC
M1 (10)	54101M1	N54101M1
M3 (14)	54104M3	N54104M3
M5 (14)	54109M5	N54109M5
Mini (14)	54109MN	N54109MN

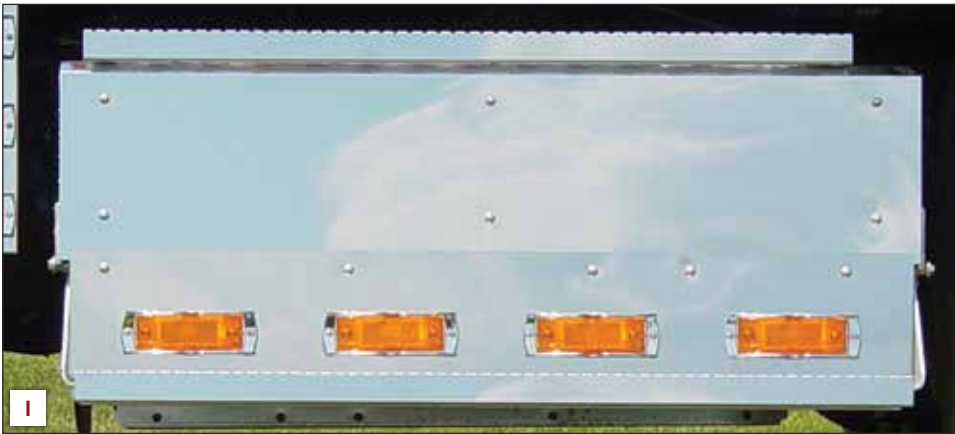

9900I / IX UNDER DOOR PANELS

- J.** **1** - Fits I Model truck with sleeper. Tape mount. Will not fit day cab. (Pair)
50200 **N50200**



See page 382 for information on ordering Millennium Glo Series lights on any RoadWorks lighted part.



N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.