

CENTURY / COLUMBIA FAIRING TRIMS

Fits Century/Columbia. For information on fairing trims with lights, custom light spacing or any other questions regarding Century / Columbia Fairings, please contact **RoadWorks** customer service at 1-800-448-8741. (Pair)

FRONT FAIRING TRIMS (Pair)

Front Middle Fairing

23400 N23400

Front Lower Middle Fairing

23401 N23401

Front Bottom Fairing

23402 N23402

SCUFF KITS

Measure from center of hole to bottom edge and center of hole to edge of fuel door. (Kit)

With Heater Plug Hole (Location 1)

***Verify plug hole measurements.**

23190 N23190

Without Heater Plug Hole

23191 N23191

With Heater Plug Hole (Location 2)

***Verify plug hole measurements.**

23192 N23192



CENTER FAIRING TRIMS FOR 48" INTEGRAL SLEEPER (Pair)

30.75" Center Middle Fairing

23405 N23405


30.75" Center Bottom Fairing

23415 N23415

30.75" Center Lower Middle Fairing

No Lights No Holes

23410 N23410

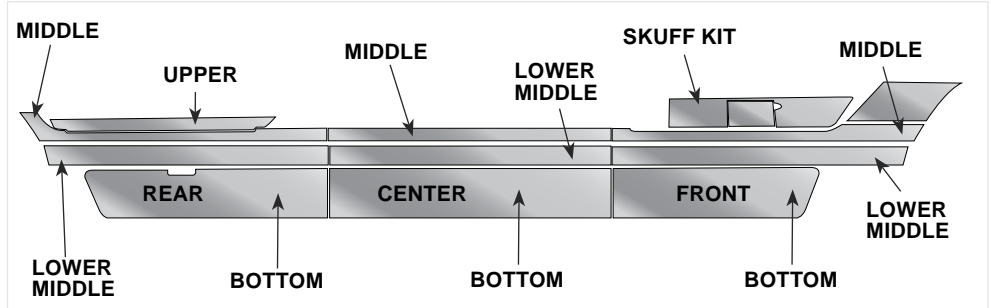

CENTER FAIRING TRIMS FOR 58" INTEGRAL SLEEPER (Pair)

40.75" Center Middle Fairing

23404 N23404

40.75" Center Bottom Fairing

23414 N23414

40.75" Center Lower Middle Fairing

No Lights No Holes

23409 N23409



***Measure from the center of the hole to the bottom edge, and the center of the hole to the edge of the fuel door.**

CENTER FAIRING TRIMS FOR 70" INTEGRAL SLEEPER (Pair)

52.75" Center Middle Fairing

23403 N23403

52.75" Center Bottom Fairing

23413 N23413

52.75" Center Lower Middle Fairing

No Lights No Holes

23408 N23408



REAR FAIRING TRIMS

See figures 1, 2, 3, and 4. Provide us with measurements A through K, and we will custom size Rear Fairing Trims for your truck.

For lighted Fairings call RoadWorks Customer Service at 1-800-448-8741 with your dimensions.

