

H


BLIND MOUNT UN-TIE DARWIN VISOR
 Fits 325, 330, 335, 337, 340, 347, 348, 357, 365, 367, 375, 377, 378, 379, 382, 384, 385, 386, 388 and 389. Fits UltraCab and Flat Top. Does not fit 2014 & Newer "Pride and Class" edition 388 / 389 trucks. (Kit)

See pages 56 - 58 for Pride and Class Edition Drop Visors [2014 & Newer]

CAB MOUNTED MIRRORS [2005 & Newer]

DARWIN 10.5" TO 6" UN-TIE VISOR [Kit]

H.	Blank (0)	35575	N35575
	Front Lights		
	3/4 Button (10)	35575LT0	N35575LT0
	Front Lights		
	Bulls-Eye (10)	35575LT1	N35575LT1
	Top Lights		
	3/4 Button (10)	35575LT2	N35575LT2
	Top Lights		
I.	Bulls-Eye (10)	35575LT3	N35575LT3

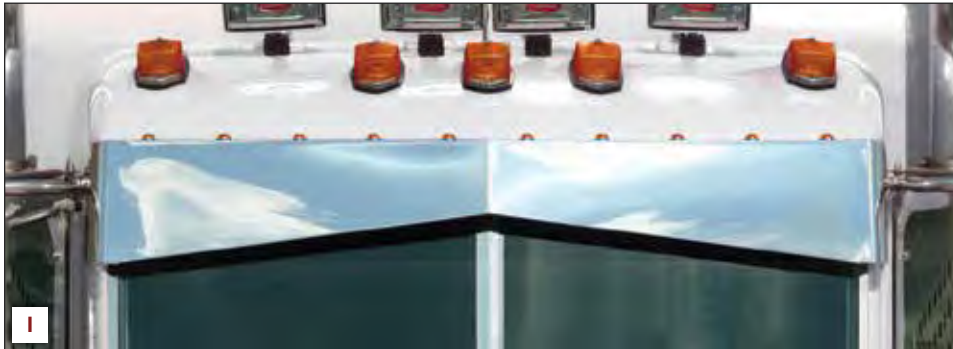

I

DOOR MOUNTED MIRRORS [2004 & Earlier]

DARWIN 10.5" TO 6" UN-TIE VISOR [Kit]

J.	Blank (0)	35585	N35585
	Front Lights		
	3/4 Button (10)	35585LT0	N35585LT0
	Front Lights		
	Bulls-Eye (10)	35585LT1	N35585LT1
	Top Lights		
	3/4 Button (10)	35585LT2	N35585LT2
	Top Lights		
K.	Bulls-Eye (10)	35585LT3	N35585LT3



J

CAB AND DOOR MOUNTED MIRRORS

Fits both cab and door mounted mirror trucks. [1988 & Newer]

See Image L for side view.

DARWIN 10.5" TO 6" UN-TIE VISOR [Kit]

	Blank (0)	35589	N35589
	Front Lights		
	3/4 Button (10)	35589LT0	N35589LT0
	Front Lights		
	Bulls-Eye (10)	35589LT1	N35589LT1
	Top Lights		
	3/4 Button (10)	35589LT2	N35589LT2
	Top Lights		
	Bulls-Eye (10)	35589LT3	N35589LT3



K

For example images of Darwin Visors with lights on front surface see pages 61 - 62.



L

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.