




When replacing factory fiberglass visor, existing holes will not be reused. Factory Fiberglass Visor Bracket Locations will be visible.

ULTRACAB VISORS - Add an "L" to your part number to order a louvered visor. (Kit)

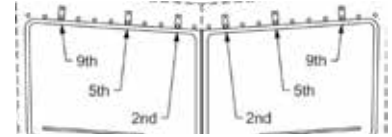

[2002 & Newer] UltraCab Factory Bracket Locations



**CAB MOUNTED MIRRORS** [2005 & Newer]  
Fits 335, 357, 377, 378, 379, 385, 388, and 389.  
*Does not fit [2013 & Newer] "Pride and Class" edition 388 / 389 trucks.*

- 14.5" Drop Visor
- F. 35018** **N35018**
- Monster Drop Bow-Tie Visor
- G. 35019** **N35019**
- 11" Drop Visor
- H. 35020** **N35020**
- Regular Drop Bow-Tie Visor
- I. 35021** **N35021**



**DOOR MOUNTED MIRRORS** [2002-2005]  
Fits 357, 378, 379, and 385.

- 11" Factory-Style Extended Visor
- J. 35012** **N35012**
- 14.5" Drop Visor
- 35013** **N35013**
- Monster Drop Bow-Tie Visor
- 35014** **N35014**
- 11" Drop Visor
- 35015** **N35015**
- Regular Drop Bow-Tie Visor
- 35016** **N35016**



[1999-2001] UltraCab Factory Bracket Locations



**DOOR MOUNTED MIRRORS** [1999-2001]  
Fits 357, 377, 378, 379, and 385.

- 11" Factory-Style Extended Visor
- 35000** **N35000**
- 14.5" Drop Visor
- 35001** **N35001**
- Monster Drop Bow-Tie Visor
- 35002** **N35002**
- 11" Drop Visor
- 35003** **N35003**
- Regular Drop Bow-Tie Visor
- 35004** **N35004**



[1998 & Earlier] UltraCab Factory Bracket Locations



**DOOR MOUNTED MIRRORS** [1998 & Earlier]  
Fits 357, 377, 378, 379, and 385.

- 11" Factory-Style Extended Visor
- 35006** **N35006**
- 14.5" Drop Visor
- 35007** **N35007**
- Monster Drop Bow-Tie Visor
- 35008** **N35008**
- 11" Drop Visor
- 35009** **N35009**
- Regular Drop Bow-Tie Visor
- 35010** **N35010**

**N** \*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.