

CLASSIC / FLD FLAT TOP UNTIE VISORS

Replaces factory stainless visor. If no existing visor or if replacing factory fiberglass visor you will also need Bracket Kit 25000-08 in addition to your visor. Add an "L" after your part number to order a louvered visor. [1995-2009] (Kit)

CLASSIC / FLD FLAT TOP UNTIE DROP VISOR

G.	Door Mounted Mirrors	25004	N25004
H.	Cab Mounted Mirrors	25024	N25024

BRACKET KITS

If no existing visor or if replacing factory fiberglass visor you will need Bracket Kit 25000-08 in addition to above visors. Does not fit integral fit / car hauler. For integral flat top / car hauler, use 25000-08CH below. (Kit)

Fiberglass Visor Replacement Bracket Kit	25000-08	N25000-08	
Fiberglass Visor Replacement Bracket Kit	Fits integral flat top / car hauler	25000-08CH	N25000-08CH


CLASSIC / FLD CONDO UNTIE DROP VISOR

Blank (0)	25320UT	N25320UT
Supernova (8)	25321UT	N25321UT
Crew (8)	25323UT	N25323UT
I. 2" Round Flat (10)	25324UTB	N25324UTB
2" Round Beehive (10)	25325UTB	N25325UTB
Challenger (10)	25329UTB	N25329UTB
Bulls-Eye (10)	25330UTB	N25330UTB
Bulls-Eye (10) ID Pattern	25332UTBID	N25332UTBID
3/4" Button (10)	25330UTGB	N25330UTGB
Fusion (10)	25331UTBC	N25331UTBC
M1 (8)	25321UTM1	N25321UTM1
M3 (10)	25324UTM3	N25324UTM3
M5 (10)	25329UTM5	N25329UTM5
Mini (10)	25329UTMN	N25329UTMN

FREIGHTLINER CENTURY / COLUMBIA CONDO / MID-ROOF UNTIE VISORS

Does not replace stainless steel day cab visor. **For trucks with 2 bolts per visor side.** (2003 & Earlier) (Kit)

Blank (0)	25520UT	N25520UT
Supernova (8)	25521UT	N25521UT
Crew (8)	25523UT	N25523UT
2" Round Flat (10)	25524UTB	N25524UTB
2" Round Beehive (10)	25525UTB	N25525UTB
Challenger (10)	25529UTB	N25529UTB
J. Bulls-Eye (10)	25530UTGB	N25530UTGB
Bulls-Eye (10) ID Pattern	25530UTBID	N25530UTBID
3/4" Button (10)	25530UTB	N25530UTB
Fusion (10)	25531UTBC	N25531UTBC
M1 (8)	25521UTM1	N25521UTM1
M3 (10)	25524UTM3	N25524UTM3
M5 (10)	25529UTM5	N25529UTM5
Mini (10)	25529UTMN	N25529UTMN

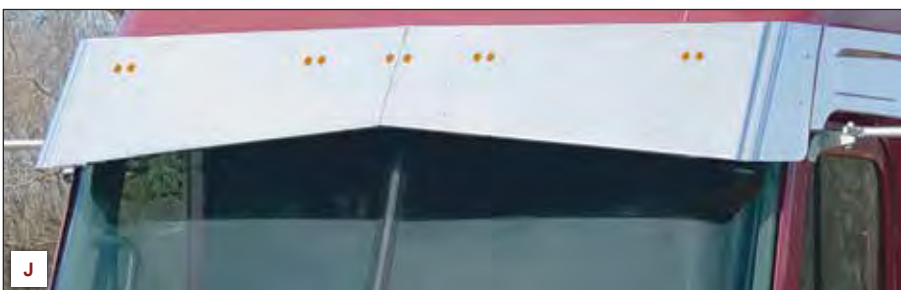

See Image F Previous Page for 2 Bolt Visor Example.

FREIGHTLINER CENTURY / COLUMBIA / CORONADO CONDO / MID-ROOF UNTIE VISORS

Does not replace stainless steel day cab visor. **For trucks with 3 bolts per visor side.** (2004 & Newer) (Kit)

Blank (0)	25560UT	N25560UT
Supernova (8)	25561UT	N25561UT
Crew (8)	25563UT	N25563UT
2" Round Flat (10)	25564UTB	N25564UTB
2" Round Beehive (10)	25565UTB	N25565UTB
Challenger (10)	25569UTB	N25569UTB
K. Bulls-Eye (10)	25570UTBC	N25570UTBC
Bulls-Eye (10) ID Pattern	25570UTBCID	N25570UTBCID
3/4" Button (10)	25570UTGB	N25570UTGB
Fusion (10)	25571UTBC	N25571UTBC
M1 (8)	25561UTM1	N25561UTM1
M3 (10)	25564UTM3	N25564UTM3
M5 (10)	25569UTM5	N25569UTM5
Mini (10)	25569UTMN	N25569UTMN



See Image E Previous Page for 3 Bolt Visor Example.

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.