

### W900A VISOR [1975 & Newer]

- 12" Drop Visor  
**A. 45370 N45370**
- 
- 9" Drop Visor  
**45372 N45372**
- 
- Monster Drop Bow-Tie Visor  
**B. 45371 N45371**
- 
- Regular Drop Bow-Tie Visor  
**45373 N45373**



### K100 CAB OVER VISOR

- K100 Blind Mount 11" Drop Visor  
**C. 45090 N45090**



### REPLACEMENT VISORS FOR CURVED AND FLAT WINDSHIELDS

Fits models W900B, W900L, T300, T400, T600 and T800.

**Must have factory brackets. Will not replace fiberglass visor.**

- Replacement Visor  
**45000 N45000**
- 
- Replacement Extended Visor  
 Fits all curved windshields, with 3 factory brackets & flat windshields. [1999-2005] (Kit)  
**D. 45001 N45001**
- 
- Replacement Visor  
 Fits all curved windshields, with 2 factory brackets. [2007 & Newer] (Kit)  
**E. 45005 N45005**



### FIBERGLASS VISOR INSERT [1985 & Newer]

Fits Models W900B, W900L, T300, T400, T600 and T800. Fits 1 And 2 Piece Curved Windshields.

- Fiberglass Insert with 9 Challenger Lights and Bezels  
**F. 40160B N40160B**



Side shot of Image E  
 Part # 45005




If your truck does not look like the truck in the image please call RoadWorks Customer Service at 1-800-448-8741 to verify fit.

### K100 CAB OVER VISOR

- A. 1 - Blind Mount 11" Drop Visor (Kit)**  
**45090 N45090**

### K100 CAB OVER GRILLE INSERT

- 2 - Punch Grille Insert (Each)**  
**45290-XX 45290-XX**

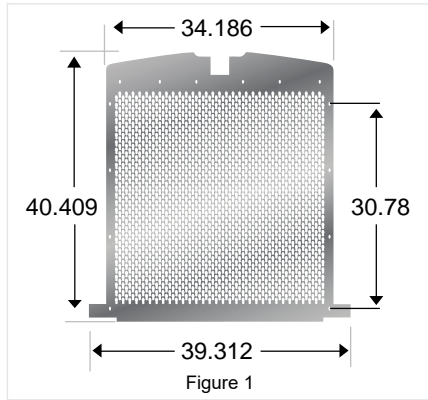

Replace **XX** in the part number with a style from the punch options table. Verify measurements from figure 1.

### PUNCH OPTIONS

View punch styles page 362.

- 20 Keyholes
- 23 Small 1/4" Circles (Shown)
- 24 Large 7/16" Circles
- 28 Hexagons
- 30 Horizontal Rectangles
- 31 Vertical Rectangles
- 32 5/16" In-Line Squares
- 33 5/16" Offset Squares
- 36 Horizontal Ovals
- 37 Vertical Ovals
- 38 Horizontal 3/16" Oblong
- 39 Vertical 3/16" Oblong
- 40 Horizontal 5/16" Oblong
- 41 Vertical 5/16" Oblong
- 46 Stars
- 47 Snake Skin

**3 - Please call RoadWorks customer service for different bumper sizes at 1-800-448-8741. (Each)**

**B. K100 Intake Trim [See punch options above.] (Each)**

- 40719-XX 40719-XX**

K100 Headlight Visor  
 Fits double rectangular headlights. (Pair)

**C. 10825 N10825**

K100 Below Door Cab Entry Steps & Step Guards (Kit)

**D. 40705 N40705**

### VENT TRIMS (Each)

**E. 1 - Vent Surround Trim**  
 Dimple surround.

- 40108 N40108**

**2 - Vent Cover**  
 Blank cover with sides, 4.75" x 10.25".

- 40097 N40097**

### DOOR HANDLE TRIMS Non-daylite cab and studio sleeper storage door handle trims. (Pair)

Cab And Storage Door Handle Trim

**F. 40113 N40113**

