

W900A VISOR [1975 & Newer]

- 12" Drop Visor
A. 45370 N45370
-
- 9" Drop Visor
45372 N45372
-
- Monster Drop Bow-Tie Visor
B. 45371 N45371
-
- Regular Drop Bow-Tie Visor
45373 N45373



K100 CAB OVER VISOR

- K100 Blind Mount 11" Drop Visor
C. 45090 N45090



REPLACEMENT VISORS FOR CURVED AND FLAT WINDSHIELDS

Fits models W900B, W900L, T300, T400, T600 and T800.

Must have factory brackets. Will not replace fiberglass visor.

- Replacement Visor
45000 N45000
-
- Replacement Extended Visor
 Fits all curved windshields, with 3 factory brackets & flat windshields. [1999-2005] (Kit)
D. 45001 N45001
-
- Replacement Visor
 Fits all curved windshields, with 2 factory brackets. [2007 & Newer] (Kit)
E. 45005 N45005



FIBERGLASS VISOR INSERT [1985 & Newer]

Fits Models W900B, W900L, T300, T400, T600 and T800. Fits 1 And 2 Piece Curved Windshields.

- Fiberglass Insert with 9 Challenger Lights and Bezels
F. 40160B N40160B



Side shot of Image E
 Part # 45005




If your truck does not look like the truck in the image please call RoadWorks Customer Service at 1-800-448-8741 to verify fit.

K100 CAB OVER VISOR

- A. 1 - Blind Mount 11" Drop Visor (Kit)**
45090 N45090

K100 CAB OVER GRILLE INSERT

- 2 - Punch Grille Insert (Each)**
45290-XX 45290-XX

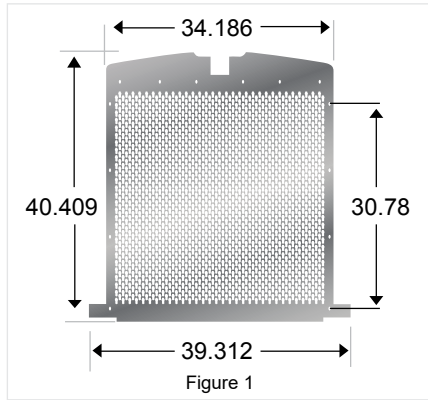

Replace **XX** in the part number with a style from the punch options table. Verify measurements from figure 1.

PUNCH OPTIONS

View punch styles inside back cover.

- 20 Keyholes
- 23 Small 1/4" Circles (Shown)
- 24 Large 7/16" Circles
- 28 Hexagons
- 30 Horizontal Rectangles
- 31 Vertical Rectangles
- 32 5/16" In-Line Squares
- 33 5/16" Offset Squares
- 36 Horizontal Ovals
- 37 Vertical Ovals
- 38 Horizontal 3/16" Oblong
- 39 Vertical 3/16" Oblong
- 40 Horizontal 5/16" Oblong
- 41 Vertical 5/16" Oblong
- 46 Stars
- 47 Snake Skin

3 - Please call RoadWorks customer service for different bumper sizes at 1-800-448-8741. (Each)

B. K100 Intake Trim [See punch options above.] (Each)

40719-XX 40719-XX

K100 Headlight Visor
 Fits double rectangular headlights. (Pair)

C. 10825 N10825

K100 Below Door Cab Entry Steps & Step Guards (Kit)

D. 40705 N40705

VENT TRIMS (Each)

E. 1 - Vent Surround Trim
 Dimple surround.

40108 N40108

2 - Vent Cover
 Blank cover with sides, 4.75" x 10.25".

40097 N40097

DOOR HANDLE TRIMS Non-daylite cab and studio sleeper storage door handle trims. (Pair)

Cab And Storage Door Handle Trim

F. 40113 N40113

