

INTERNATIONAL

INTERNATIONAL DROP VISORS

15" DROP VISORS FITS I-MODEL 5500I, 5600I, 5900I, 9100I, 9200I, 9400I & 9900I CABS WITH HI-RISE / SKY-RISE PRO SLEEPERS
Replaces factory fiberglass or stainless visor.
(Kit)


	Blank (0)	55000	N55000
	SuperNova (8)	55001	N55001
	Crew (8)	55003	N55003
A.	2" Round Flat (10)	55004B	N55004B
	2" Round Beehive (10)	55005B	N55005B
	Challenger (10)	55009B	N55009B
	Bulls-Eye (10)	55010B	N55010B
	3/4" Button (10)	55010GB	N55010GB
	Fusion (10)	55011BC	N55011BC
	M1 (8)	55001M1	N55001M1
	M3 (10)	55004M3	N55004M3
	M5 (10)	55009M5	N55009M5
	Mini (10)	55009MN	N55009MN



15" Drop Visor with 2" Round Flat Lights

13.8" DROP VISORS FITS I-MODEL CABS WITH LO-ROOF PRO SLEEPERS
Replaces factory fiberglass or stainless visor.
Will not fit Day Cabs. (Kit)

	Blank (0)	55100	N55100
	SuperNova (8)	55101	N55101
	Crew (8)	55103	N55103
	2" Round Flat (10)	55104B	N55104B
	2" Round Beehive (10)	55105B	N55105B
B.	Challenger (10)	55109 B	N55109B
	Bulls-Eye (10)	55110B	N55110B
	3/4" Button (10)	55110GB	N55110GB
	Fusion (10)	55111BC	N55111BC
	M1 (8)	55101M1	N55101M1
	M3 (10)	55104M3	N55104M3
	M5 (10)	55109M5	N55109M5
	Mini (10)	55109MN	N55109MN

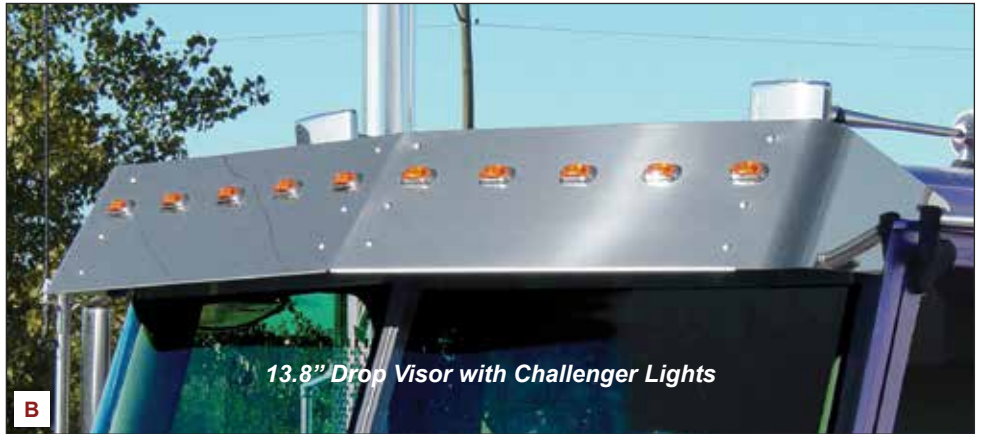

13.8" Drop Visor with Challenger Lights

12.5" DROP VISORS FITS LONESTAR AND PROSTAR WITH HI-RISE PRO SLEEPERS
Replaces factory fiberglass or stainless visor.
(Kit)


	Blank (0)	55220	N55220
	SuperNova (8)	55221	N55221
	Crew (8)	55223	N55223
	2" Round Flat (10)	55224B	N55224B
	2" Round Beehive (10)	55225B	N55225B
	Challenger (10)	55229B	N55229B
	Bulls-Eye (10)	55230B	N55230B
C.	Bulls-Eye (10) ID Pattern	55230BID	N55230BID
	3/4" Button (10)	55230GB	N55230GB
	Fusion (10)	55231BC	N55231BC
	M1 (8)	55221M1	N55221M1
	M3 (10)	55224M3	N55224M3
	M5 (10)	55229M5	N55229M5
	Mini (10)	55229MN	N55229MN



12.5" Drop Visor with ID Pattern Bulls-Eye Lights

10.5" DROP VISORS FITS 4000, 7000, AND 8000 SERIES DAY CABS WITHOUT FACTORY VISOR
[2002 & Newer] (Kit)

	Blank (0)	55120	N55120
	SuperNova (8)	55121	N55121
	Crew (8)	55123	N55123
	2" Round Flat (10)	55124B	N55124B
	2" Round Beehive (10)	55125B	N55125B
	Challenger (10)	55129B	N55129B
	Bulls-Eye (10)	55130B	N55130B
D.	Bulls-Eye (10) ID Pattern	55130BID	N55130BID
	3/4" Button (10)	55130GB	N55130GB
	Fusion (10)	55131BC	N55131BC
	M1 (8)	55121M1	N55121M1
	M3 (10)	55124M3	N55124M3
	M5 (10)	55129M5	N55129M5
	Mini (10)	55129MN	N55129MN

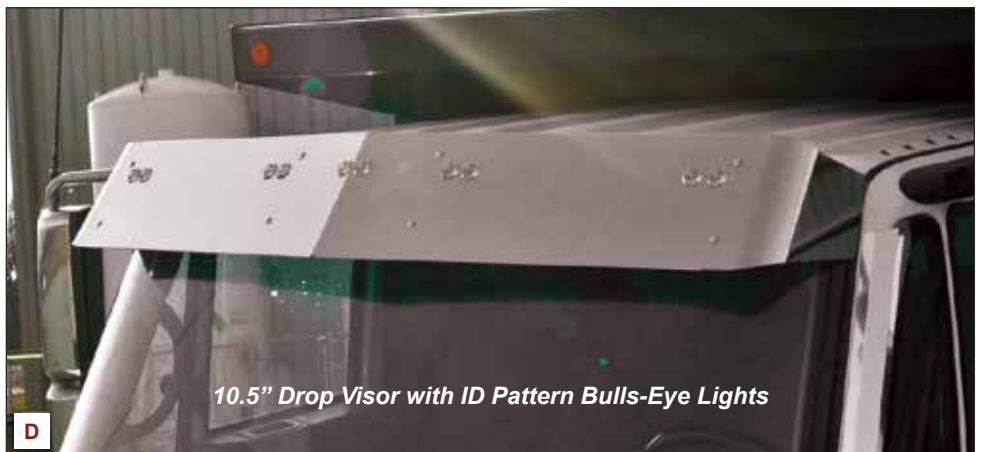

10.5" Drop Visor with ID Pattern Bulls-Eye Lights




10.5" Drop Visor with ID Pattern Bulls-Eye Lights

E

10.5" DROP VISORS FITS 4000, 7000, AND 8000 SERIES DAYCABS WITH FACTORY VISOR. ALSO FITS PROSTAR AND LONESTAR DAYCABS Replaces factory fiberglass or stainless visor. [2002 & Newer] (Kit)

Blank (0)	55140	N55140
SuperNova (8)	55141	N55141
Crew (8)	55143	N55143
2" Round Flat (10)	55144B	N55144B
2" Round Beehive (10)	55145B	N55145B
Challenger (10)	55149B	N55149B
Bulls-Eye (10)	55150B	N55150B
E. Bulls-Eye (10) ID Pattern	55150BID	N55150BID
3/4" Button (10)	55150GB	N55150GB
Fusion (10)	55151BC	N55151BC
M1 (8)	55141M1	N55141M1
M3 (10)	55144M3	N55144M3
M5 (10)	55149M5	N55149M5
Mini (10)	55149MN	N55149MN

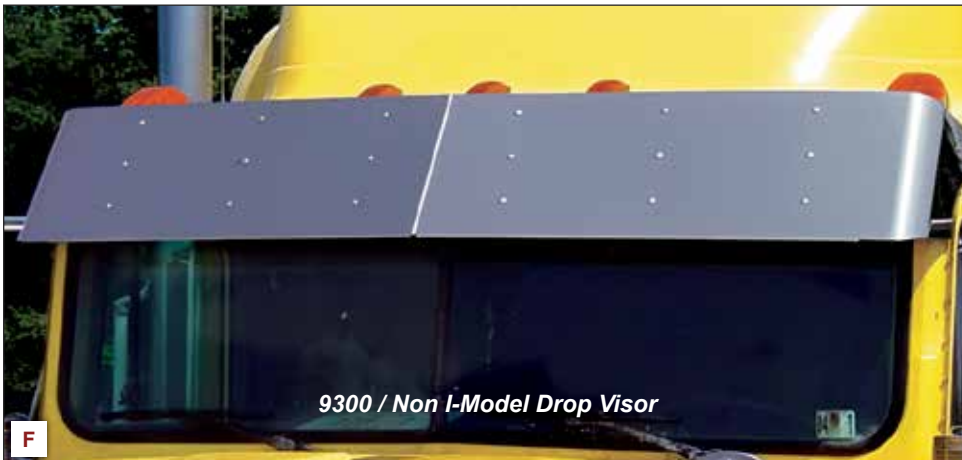


9300 / Non I-Model Drop Visor

F

DROP VISORS FOR 9300 / 9400 NON I-MODEL WITH WIPERS ON BOTTOM OF WINDSHIELD Replaces factory fiberglass or stainless visor. Fits trucks with wipers on the bottom of windshield. Does not fit daycab, high rise sleeper cabs, or trucks with aluminum roofcap. [1989-1999] (Kit)

F. 13.5" Drop Visor	55200	N55200
13.5" Louvered Drop Visor	55200L	N55200L
Monster Drop Bow-Tie Visor	55201	N55201
11" Drop Visor	55202	N55202
11" Louvered	55202L	N55202L
Regular Drop Bow-Tie Visor	55203	N55203

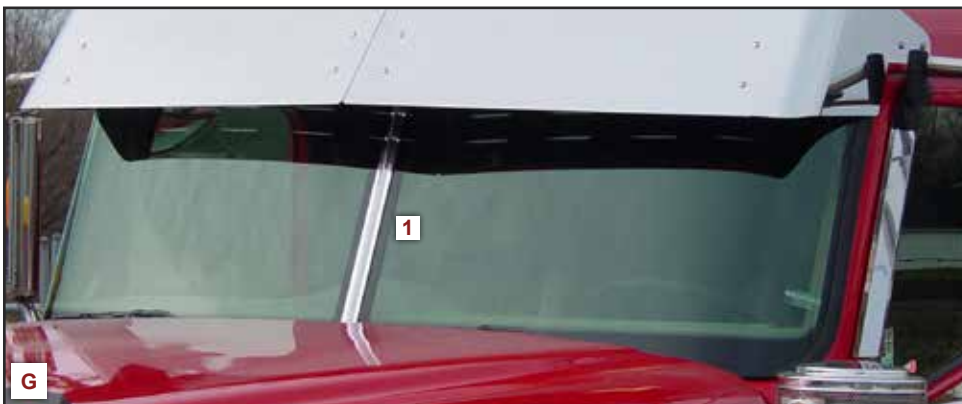

G

DROP VISORS FOR 9300 / 9400 NON I-MODEL WITH WIPERS ON TOP OF WINDSHIELD Replaces factory fiberglass or stainless visor. Fits trucks with wipers on the top of windshield. Does not fit daycab, high rise sleeper cabs, or trucks with aluminum roofcap. [1989-1999] (Kit)

13.5" Drop Visor	55190	N55190
13.5" Louvered Drop Visor	55190L	N55190L
Monster Drop Bow-Tie Visor	55191	N55191
11" Drop Visor	55192	N55192
11" Louvered Drop Visor	55192L	N55192L
Regular Drop Bow-Tie Visor	55193	N55193

G. 1 - I-Model Cab 2-piece Windshield Center Post Trim (Each)
50123 N50123



See page 382 for information on ordering Millennium Glo Series lights on any RoadWorks lighted part.

To keep your equipment looking great use RoadWorks Detail Products, seen on pages 314-317.

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

10.5" DROP VISORS FITS 4000 / 7000 / 8000 SERIES DAYCABS WITH FACTORY VISOR

Also fits Prostar and Lonestar Daycabs

Fits day cab with factory visor.

[2002 & Newer] (Kit)

10.5" DROP VISORS

Blank (0)	55140	N55140
SuperNova (8)	55141	N55141
Crew (8)	55143	N55143
2" Round Flat (10)	55144B	N55144B
2" Round Beehive (10)	55145B	N55145B
Challenger (10)	55149B	N55149B
Bulls-Eye (10)	55150B	N55150B
Bulls-Eye (10) ID Pattern	55150BID	N55150BID
3/4" Button (10)	55150GB	N55150GB
Fusion (10)	55151BC	N55151BC
M1 (8)	55141M1	N55141M1
M3 (10)	55144M3	N55144M3
M5 (10)	55149M5	N55149M5
Mini (10)	55149MN	N55149MN

7600 / WORKSTAR LOUVER GRILLE

7600 WorkStar Replacement Grille With 11 Louver-Style Bars (Kit)

A. **55350** **N55350**

BUMPER BAR

Call RoadWorks customer service for information on custom making a bumper and bumper bar for your WorkStar at 1-800-448-8741.

7600 / WORKSTAR EXTERIOR CAB TRIMS

(Pair)

B. **1** - Window Air Deflectors

51001 **N51001**

2 - Under Window Trim.

Fits trucks with painted under windows.

51007 **N51007**

3 - WorkStar Upper Door Logo Trim with Flat Back (shown)

51026 **N51026**

4 - Door Handle Surrounds

51000 **N51000**

Center Door Handle Trim

51002 **N51002**

WorkStar Upper Door Logo Trim with Round Back

51027 **N51027**



See page 382 for information on ordering Millennium Glo Series lights on any RoadWorks lighted part.

