

### 4900 SERIES VISORS

Fits Flat Top truck with 5 brackets, cab mount mirrors, and factory visor.

Does not fit trucks with Stratosphere sleepers. Does not fit Heritage Cab. (Kit)

### CAB MOUNTED MIRRORS [2012 & Newer]

<b>A.</b> 13.5" Drop Visor	<b>65020</b>	<b>N65020</b>
13.5" Louvered Drop Visor	<b>65020L</b>	<b>N65020L</b>
Monster Drop Bow-Tie Visor	<b>65021</b>	<b>N65021</b>
12" Drop Visor	<b>65023</b>	<b>N65023</b>
12" Louvered Drop Visor	<b>65023L</b>	<b>N65023L</b>
Regular Drop Bow-Tie Visor	<b>65024</b>	<b>N65024</b>



13.5" Drop Visor Cab Mount Mirrors

### 4900 SERIES VISORS

Fits Flat Top truck with 5 brackets, door mount mirrors, and factory visor.


Does not fit trucks with Stratosphere sleepers. Does not fit Heritage Cab. (Kit)

### DOOR MOUNTED MIRRORS [1997 & Newer]


<b>B.</b> 13.5" Drop Visor	<b>65000</b>	<b>N65000</b>
13.5" Louvered Drop Visor	<b>65000L</b>	<b>N65000L</b>
<b>C.</b> Monster Drop Bow-Tie Visor	<b>65001</b>	<b>N65001</b>
<b>D.</b> 12" Drop Visor	<b>65003</b>	<b>N65003</b>
12" Louvered Drop Visor	<b>65003L</b>	<b>N65003L</b>
<b>E.</b> Regular Drop Bow-Tie Visor	<b>65004</b>	<b>N65004</b>




13.5" Drop Visor Door Mount Mirrors

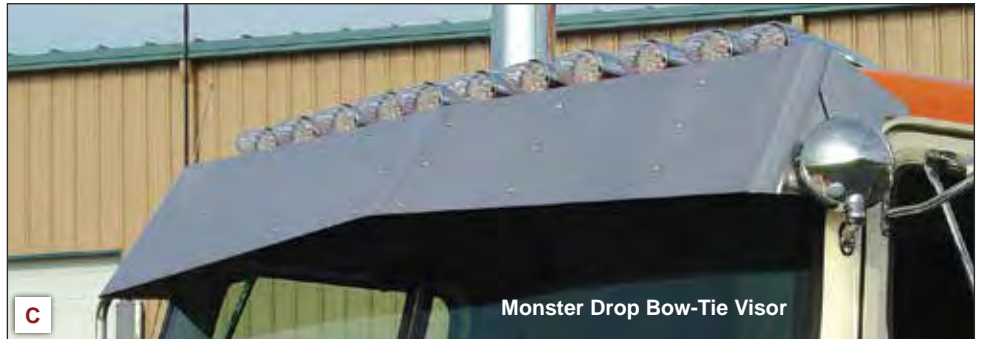

Monster Drop Bow-Tie Visor

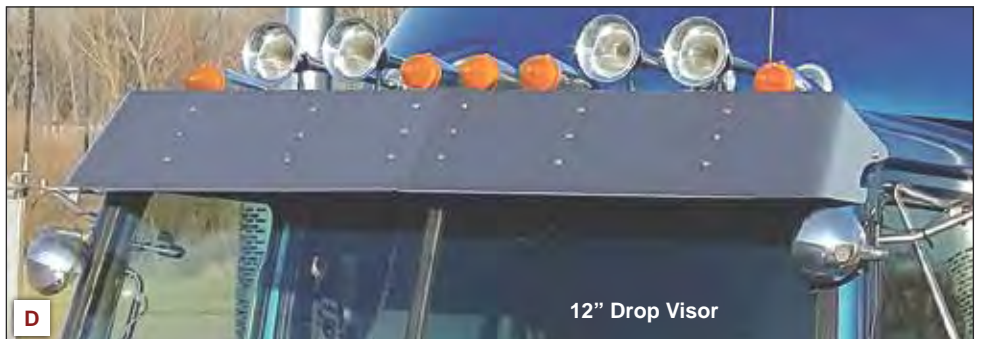

12" Drop Visor

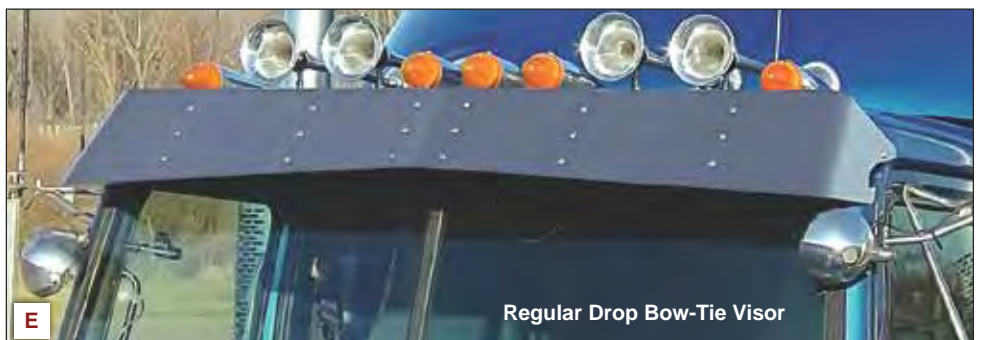

Regular Drop Bow-Tie Visor



**4900 SERIES VISORS**

Fits Flat Top truck with 5 brackets, cab mount mirrors, and factory visor.

Does not fit trucks with Stratosphere sleepers. Does not fit Heritage Cab. (Kit)

**CAB MOUNTED MIRRORS [2012 & Newer]**

<b>F.</b>	13.5" Drop Visor	<b>65520</b>	<b>N65520</b>
	13.5" Louvered Drop Visor	<b>65520L</b>	<b>N65520L</b>
	Monster Drop Bow-Tie Visor	<b>65521</b>	<b>N65521</b>
	12" Drop Visor	<b>65523</b>	<b>N65523</b>
	12" Louvered Drop Visor	<b>65523L</b>	<b>N65523L</b>
	Regular Drop Bow-Tie Visor	<b>65524</b>	<b>N65524</b>



**4900 SERIES VISORS**

Fits Flat Top truck with 5 brackets, door mount mirrors, and factory visor.



Does not fit trucks with Stratosphere sleepers. Does not fit Heritage Cab. (Kit)

**DOOR MOUNTED MIRRORS [1997 & Newer]**

<b>G.</b>	13.5" Drop Visor	<b>65500</b>	<b>N65500</b>
	13.5" Louvered Drop Visor	<b>65500L</b>	<b>N65500L</b>
<b>H.</b>	Monster Drop Bow-Tie Visor	<b>65501</b>	<b>N65501</b>
<b>I.</b>	12" Drop Visor	<b>65503</b>	<b>N65503</b>
	12" Louvered Drop Visor	<b>65503L</b>	<b>N65503L</b>
<b>J.</b>	Regular Drop Bow-Tie Visor	<b>65504</b>	<b>N65504</b>



To keep your equipment looking great use RoadWorks Detail Products, seen on pages 292-295.

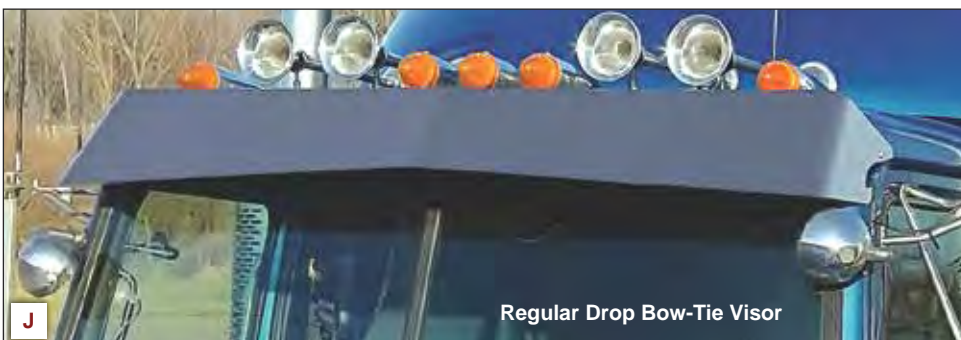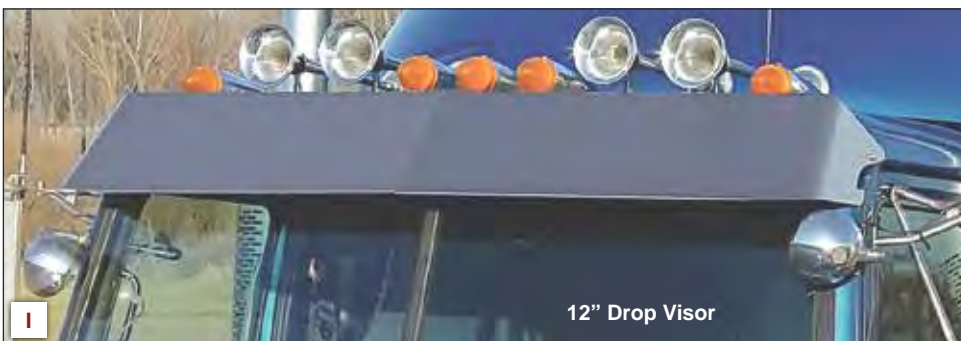

**N** \*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.