

VENT TRIMS


Fits Century / Columbia (Each)

- A.** 1 - Sleeper Vent Trim Ring
 23095 N23095
 2 - Vent Cover with Sides
 23094 N23094

STORAGE DOOR TRIMS

Fits Century / Columbia [2003 & Earlier] (Each)

- B.** 1 - Storage Door Latch Trim
 23092 N23092
 Driver Side Storage Door Cover
 23101 N23101
 Passenger Side Storage Door Cover
C. 23102 N23102

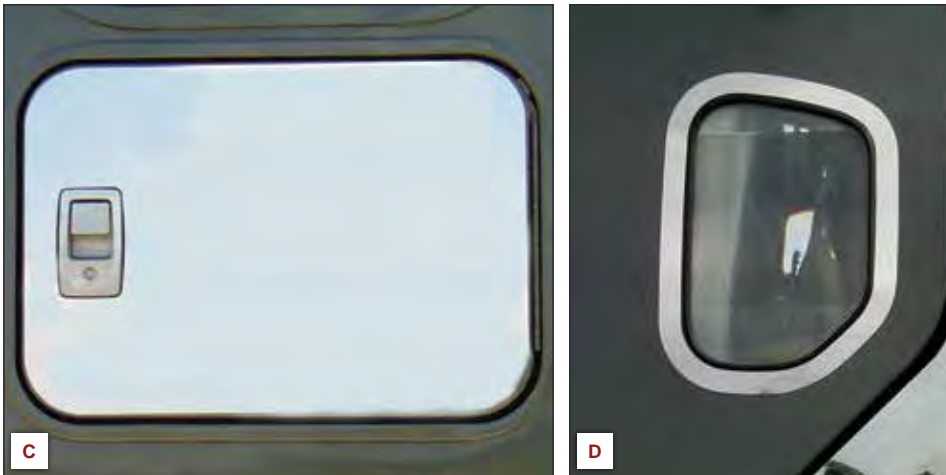

VIEW WINDOW TRIMS

Fits Century / Columbia (Each)

- Blank
D. 23088 N23088
 With Flames
 23107 N23107

EXTENSION TRIMS

Fits Century / Columbia (Kit)

- E.** 1 - Vertical Side Wing Extension - Does not fit wings with factory rubber.
 23097 N23097
 2 - 70" Upper Sleeper Trim With Large Extension
 23086 N23086
 70" Upper Sleeper Trim With Small Extension
 23087 N23087

LATCH AND LOGO TRIMS

Fits Century / Columbia (Pair)

- F.** 1 - Door Latch Trims, Blank
 23090 N23090
 2 - Century Class Logo Trims, Blank
 23089 N23089
 Door Latch Trims With Flames
 20459 N20459
 Century Class Logo Trims With Flames
 23112 N23112



N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

CENTURY / COLUMBIA VISOR ACCESSORIES [2003 & Earlier] (Pair)

- A. 1 - Columbia / Century Visor Insert (2-piece kit)**
23079 N23079
2 - Columbia / Century 5" Visor Extension
23081 N23081

CENTURY HOOD TRIMS [2003 & Earlier] (Pair)

- 3 - Century Hood Trim**
23082 N23082

CENTURY BUMPER, HEADLIGHT AND GRILLE TRIMS [2003 & Earlier] (Each)

- B. 1 - 3-piece Front Bumper Trim**
23070 N23070
2 - 7-piece Lower Grille, Headlight and Fender Trims
23073 N23073


CENTURY LICENSE PLATE HOLDER

Fits Century, Columbia, and FLD. Holds 3 plates. Fits plastic bumper. [2003 & Earlier] (Each)

Blank (0)	20180	N20180
Supernova (4)	20181	N20181
Crew (4)	20183	N20183
2" Round Flat (5)	20184B	N20184B
2" Round Beehive (5)	20185B	N20185B
Challenger (5)	20189B	N20189B
C. 1 - Bulls-Eye (5)	20190B	N20190B
3/4" Button (5)	20190GB	N20190GB
Fusion (5)	20191BC	N20191BC
M1 (4)	20181M1	N20181M1
M3 (5)	20184M3	N20184M3
M5 (5)	20189M5	N20189M5
Mini (5)	20189MN	N20189MN

CENTURY CAB PANEL EXTENSIONS

- D. 1 - Front Extensions**
23093 N23093

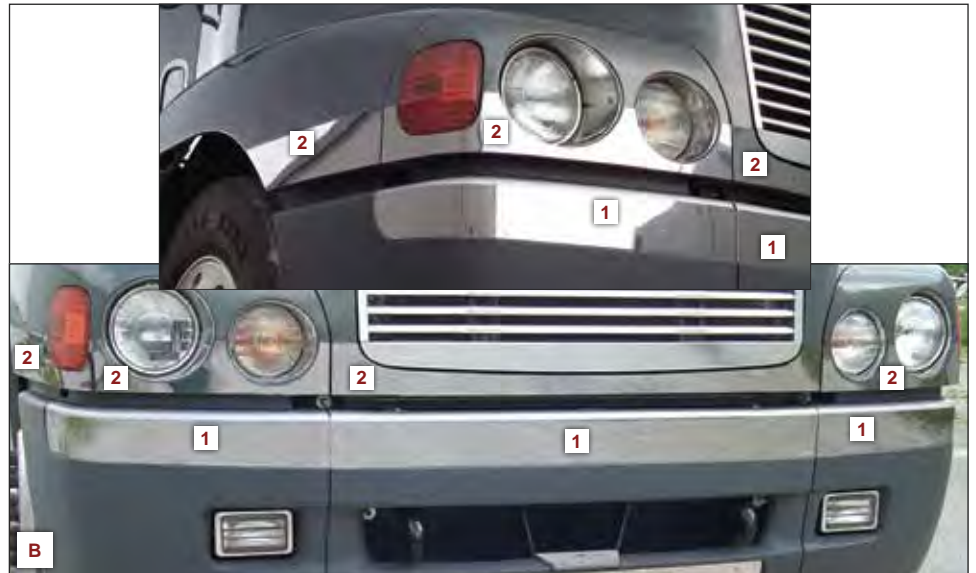

See page 6 for Century / Columbia Stainless Steel Replacent Visors.

To keep your equipment looking great use RoadWorks Detail Products, seen on pages 292 - 295.



ABOVE DOOR TRIMS (Pair)

- E. 1 - Tape Mount (Rear Stack) [2003 & Earlier]**

23077-11	N23077-11
-----------------	------------------

 (Side Stack)

23177-11	N23177-11
-----------------	------------------
- F. 1 - Tape Mount (Rear Stack) [2003 & Earlier]**

23080	N23080
--------------	---------------

 (Side Stack)

23180	N23180
--------------	---------------

CENTURY / COLUMBIA TOP OF DOOR TRIMS
Chopped look. (Pair)

POLISHED FINISH

- 2 - 6" - Top of Door Trim**

23020	N23020
--------------	---------------
- 7" - Top of Door Trim**

23022	N23022
--------------	---------------

SANDED FINISH

- 6" - Top of Door Trim**

23021	N23021
--------------	---------------
- 7" - Top of Door Trim**

23023	N23023
--------------	---------------

UNDER WINDOW TRIMS (Pair)

- 3 - Side Door Accents**

23085	N23085
--------------	---------------

SIDE COWL TRIMS (Pair)

- 4 - Columbia (2003 & Earlier)**

23116	N23116
--------------	---------------

 Century (2003 & Earlier)

23084	N23084
--------------	---------------

DOOR HANDLE TRIMS / LOGO TRIMS
Fits Classic, FLD, Century/Columbia. (Pair)

- 5 - With Flames**

20459	N20459
--------------	---------------

 Blank

23090	N23090
--------------	---------------

 Logo Trims, Blank

23113	N23113
--------------	---------------
- 6 - Logo Trims, with Flames**

23114	N23114
--------------	---------------

CENTURY / COLUMBIA CAB PANELS
Mounts to bottom of door. (Pair)

Blank (0)	26530	N26530
7 - Supernova (6)	26531	N26531
Crew (6)	26533	N26533
2" Round Flat (8)	26534B	N26534B
2" Round Beehive (8)	26535B	N26535B
Challenger (8)	26539B	N26539B
Bulls-Eye (8)	26540B	N26540B
3/4" Button (8)	26540GB	N26540GB
Fusion (8)	26541BC	N26541BC
M1 (6)	26531M1	N26531M1
M3 (8)	26534M3	N26534M3
M5 (8)	26539M5	N26539M5
Mini (8)	26539MN	N26539MN

CENTURY LOWER GRILLE INSERT
Fits Century, Columbia and FLD. (Each)

- Lower Grille Flames Insert
G. 23138 **N23138**



See page 37 for Century/Columbia Sleeper Panels.



N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

FIRE EXTINGUISHER INSIDE (Each)

- A. 1 - "Fire Extinguisher Inside" Sign**
With Flames 19.5" X 2.667"
10878 N10878

UPPER SLEEPER TRIMS (Kit)

- 2 - 70" Sleeper With Large Wing**
23086 N23086
70" Sleeper With Small Wing
23087 N23087

STORAGE DOOR TRIMS (Each)

- 3 - Surround Trim**
23105 N23105

STORAGE DOOR COVER [2004 & Newer] (Each)

- 4 - Door Cover, Without Handle Cutout**
23103 N23103

VIEW WINDOW TRIMS (Each)

- 5 - With Flames**
23107 N23107
Blank
23088 N23088

VENT COVER AND RING TRIM (Each)

- 6 - Century And Columbia Vent Cover With Sides**
23094 N23094
7 - Vent Trim Ring With Flames
23115 N23115
Vent Trim Ring, Blank
23095 N23095

DOOR HANDLE TRIMS / COLUMBIA LOGO TRIMS (Pair)

- 8 - Door Handle Surrounds With Flames**
20459 N20459
Door Handle Surrounds, Blank
23090 N23090
9 - "Columbia" Logo Trims With Flames
23114 N23114
"Columbia" Logo Trims, Blank
23113 N23113

SLEEPER DOOR TRIM (Each)

- 10 - Sleeper Door Trim, for Century / Columbia**
23106 N23106

CENTURY / COLUMBIA / CONDO REAR VERTICAL EXTENSIONS

Will not fit trucks with factory rubber installed on extensions. (Pair)

Blank (0)	23500	N23500
Supernova (18)	23501	N23501
Crew (18)	23503	N23503
2" Round Flat (28)	23504B	N23504B
2" Round Beehive (28)	23505B	N23505B
B. Challenger (28)	23509B	N23509B
Bulls-Eye (28)	23510B	N23510B
3/4" Button (28)	23510GB	N23510GB
Fusion (28)	23511BC	N23511BC
M1 (18)	23501M1	N23501M1
M3 (28)	23504M3	N23504M3
M5 (28)	23509M5	N23509M5
Mini (28)	23509MN	N23509MN



See page 29 for Rear Frame Covers.

Pages 344 - 347 for Flap Light Bars, Flap Weights, Anti-Sails.

Pages 335 - 343 for Rear Light Bars. Pages 326 - 334 for Rear Center Panels.