

**VENT TRIMS**


Fits Century / Columbia (Each)

- A. 1 - Sleeper Vent Trim Ring**  
**23095      N23095**  
**2 - Vent Cover with Sides**  
**23094      N23094**

**STORAGE DOOR TRIMS**

Fits Century / Columbia [2003 & Earlier] (Each)

- B. 1 - Storage Door Latch Trim**  
**23092      N23092**  
 Driver Side Storage Door Cover  
**23101      N23101**  
 Passenger Side Storage Door Cover  
**C. 23102      N23102**

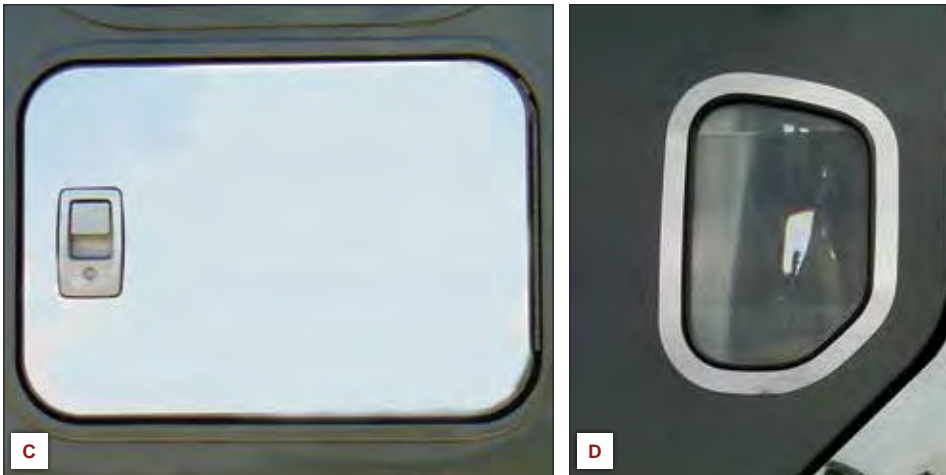

**VIEW WINDOW TRIMS**

Fits Century / Columbia (Each)

- Blank  
**D. 23088      N23088**  
 With Flames  
**23107      N23107**

**EXTENSION TRIMS**

Fits Century / Columbia (Kit)

- E. 1 - Vertical Side Wing Extension - Does not fit wings with factory rubber.**  
**23097      N23097**  
**2 - 70" Upper Sleeper Trim With Large Extension**  
**23086      N23086**  
 70" Upper Sleeper Trim With Small Extension  
**23087      N23087**



**LATCH AND LOGO TRIMS**

Fits Century / Columbia (Pair)

- F. 1 - Door Latch Trims, Blank**  
**23090      N23090**  
**2 - Century Class Logo Trims, Blank**  
**23089      N23089**  
 Door Latch Trims With Flames  
**20459      N20459**  
 Century Class Logo Trims With Flames  
**23112      N23112**



**N** \*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

# FREIGHTLINER

# CENTURY / COLUMBIA

## CENTURY / COLUMBIA VISOR ACCESSORIES [2003 & Earlier] (Pair)

- A. 1 - Columbia / Century Visor Insert (2-piece kit)**  
**23079 N23079**  
**2 - Columbia / Century 5" Visor Extension**  
**23081 N23081**

## CENTURY HOOD TRIMS [2003 & Earlier] (Pair)

- 3 - Century Hood Trim**  
**23082 N23082**

## CENTURY BUMPER, HEADLIGHT AND GRILLE TRIMS [2003 & Earlier] (Each)

- B. 1 - 3-piece Front Bumper Trim**  
**23070 N23070**  
**2 - 7-piece Lower Grille, Headlight and Fender Trims**  
**23073 N23073**


## CENTURY LICENSE PLATE HOLDER

Fits Century, Columbia, and FLD. Holds 3 plates. Fits plastic bumper. [2003 & Earlier] (Each)

Blank (0)	20180	N20180
Supernova (4)	20181	N20181
Crew (4)	20183	N20183
2" Round Flat (5)	20184B	N20184B
2" Round Beehive (5)	20185B	N20185B
Challenger (5)	20189B	N20189B
<b>C. 1 - Bulls-Eye (5)</b>	<b>20190B</b>	<b>N20190B</b>
3/4" Button (5)	20190GB	N20190GB
Fusion (5)	20191BC	N20191BC
M1 (4)	20181M1	N20181M1
M3 (5)	20184M3	N20184M3
M5 (5)	20189M5	N20189M5
Mini (5)	20189MN	N20189MN

## CENTURY CAB PANEL EXTENSIONS

- D. 1 - Front Extensions**  
**23093 N23093**

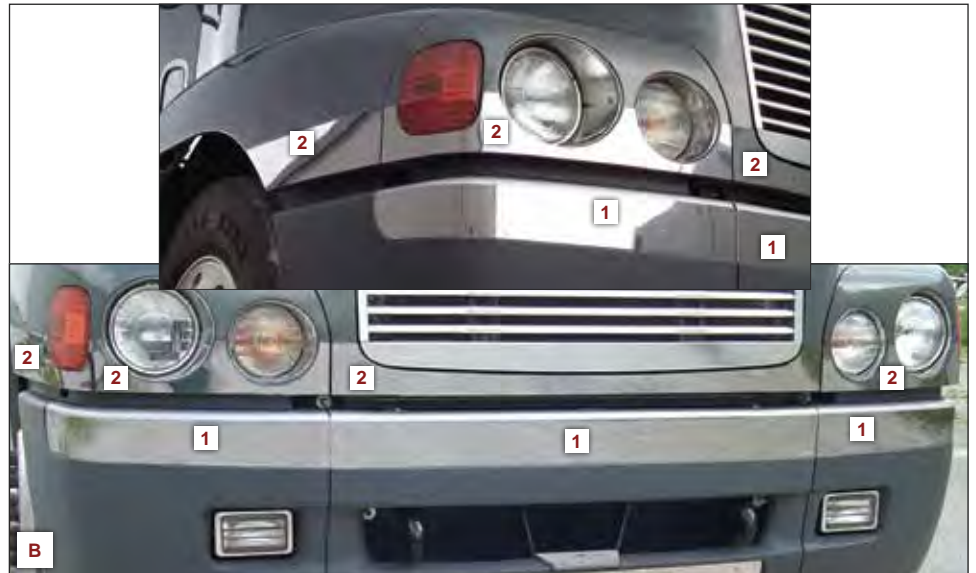

See page 10 for Century / Columbia Stainless Steel Replacent Visors.

To keep your equipment looking great use RoadWorks Detail Products, seen on pages 314-317.



**ABOVE DOOR TRIMS (Pair)**

- E. 1 - Tape Mount (Rear Stack) [2003 & Earlier]**  

<b>23077-11</b>	<b>N23077-11</b>	
(Side Stack)		
<b>23177-11</b>	<b>N23177-11</b>	
- F. 1 - Tape Mount (Rear Stack) [2003 & Earlier]**  

<b>23080</b>	<b>N23080</b>	
(Side Stack)		
<b>23180</b>	<b>N23180</b>	

**CENTURY / COLUMBIA TOP OF DOOR TRIMS**  
Chopped look. (Pair)

**POLISHED FINISH**

- 2 - 6" - Top of Door Trim**  

<b>23020</b>	<b>N23020</b>	
--------------	---------------	--
- 7" - Top of Door Trim**  

<b>23022</b>	<b>N23022</b>	
--------------	---------------	--

**SANDED FINISH**

- 6" - Top of Door Trim**  

<b>23021</b>	<b>N23021</b>	
--------------	---------------	--
- 7" - Top of Door Trim**  

<b>23023</b>	<b>N23023</b>	
--------------	---------------	--

**UNDER WINDOW TRIMS (Pair)**

- 3 - Side Door Accents**  

<b>23085</b>	<b>N23085</b>	
--------------	---------------	--

**SIDE COWL TRIMS (Pair)**

- 4 - Columbia (2003 & Earlier)**  

<b>23116</b>	<b>N23116</b>	
--------------	---------------	--
- Century (2003 & Earlier)**  

<b>23084</b>	<b>N23084</b>	
--------------	---------------	--

**DOOR HANDLE TRIMS / LOGO TRIMS**  
Fits Classic, FLD, Century/Columbia. (Pair)

- 5 - With Flames**  

<b>20459</b>	<b>N20459</b>	
--------------	---------------	--
- Blank**  

<b>23090</b>	<b>N23090</b>	
--------------	---------------	--
- Logo Trims, Blank**  

<b>23113</b>	<b>N23113</b>	
--------------	---------------	--
- 6 - Logo Trims, with Flames**  

<b>23114</b>	<b>N23114</b>	
--------------	---------------	--

**CENTURY / COLUMBIA CAB PANELS**  
Mounts to bottom of door. (Pair)

- |                          |                |                 |
|--------------------------|----------------|-----------------|
| Blank (0)                | <b>26530</b>   | <b>N26530</b>   |
| <b>7 - Supernova (6)</b> | <b>26531</b>   | <b>N26531</b>   |
| Crew (6)                 | <b>26533</b>   | <b>N26533</b>   |
| 2" Round Flat (8)        | <b>26534B</b>  | <b>N26534B</b>  |
| 2" Round Beehive (8)     | <b>26535B</b>  | <b>N26535B</b>  |
| Challenger (8)           | <b>26539B</b>  | <b>N26539B</b>  |
| Bulls-Eye (8)            | <b>26540B</b>  | <b>N26540B</b>  |
| 3/4" Button (8)          | <b>26540GB</b> | <b>N26540GB</b> |
| Fusion (8)               | <b>26541BC</b> | <b>N26541BC</b> |
| M1 (6)                   | <b>26531M1</b> | <b>N26531M1</b> |
| M3 (8)                   | <b>26534M3</b> | <b>N26534M3</b> |
| M5 (8)                   | <b>26539M5</b> | <b>N26539M5</b> |
| Mini (8)                 | <b>26539MN</b> | <b>N26539MN</b> |

**CENTURY LOWER GRILLE INSERT**  
Fits Century, Columbia and FLD. (Each)

- Lower Grille Flames Insert  
**G. 23138**      **N23138**



See page 41 for Century/Columbia Sleeper Panels.



**N** \*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

### FIRE EXTINGUISHER INSIDE (Each)

- A. 1 - "Fire Extinguisher Inside" Sign**  
With Flames 19.5" X 2.667"  
**10878 N10878**

### UPPER SLEEPER TRIMS (Kit)

- 2 - 70" Sleeper With Large Wing**  
**23086 N23086**  
70" Sleeper With Small Wing  
**23087 N23087**

### STORAGE DOOR TRIMS (Each)

- 3 - Surround Trim**  
**23105 N23105**

### STORAGE DOOR COVER [2004 & Newer] (Each)

- 4 - Door Cover, Without Handle Cutout**  
**23103 N23103**

### VIEW WINDOW TRIMS (Each)

- 5 - With Flames**  
**23107 N23107**  
Blank  
**23088 N23088**

### VENT COVER AND RING TRIM (Each)

- 6 - Century And Columbia Vent Cover With Sides**  
**23094 N23094**  
**7 - Vent Trim Ring With Flames**  
**23115 N23115**  
Vent Trim Ring, Blank  
**23095 N23095**

### DOOR HANDLE TRIMS / COLUMBIA LOGO TRIMS (Pair)

- 8 - Door Handle Surrounds With Flames**  
**20459 N20459**  
Door Handle Surrounds, Blank  
**23090 N23090**  
**9 - "Columbia" Logo Trims With Flames**  
**23114 N23114**  
"Columbia" Logo Trims, Blank  
**23113 N23113**


### SLEEPER DOOR TRIM (Each)

- 10 - Sleeper Door Trim, for Century / Columbia**  
**23106 N23106**

### CENTURY / COLUMBIA / CONDO REAR VERTICAL EXTENSIONS

Will not fit trucks with factory rubber installed on extensions. (Pair)

Blank (0)	<b>23500</b>	<b>N23500</b>
Supernova (18)	<b>23501</b>	<b>N23501</b>
Crew (18)	<b>23503</b>	<b>N23503</b>
2" Round Flat (28)	<b>23504B</b>	<b>N23504B</b>
2" Round Beehive (28)	<b>23505B</b>	<b>N23505B</b>
<b>B. Challenger (28)</b>	<b>23509B</b>	<b>N23509B</b>
Bulls-Eye (28)	<b>23510B</b>	<b>N23510B</b>
3/4" Button (28)	<b>23510GB</b>	<b>N23510GB</b>
Fusion (28)	<b>23511BC</b>	<b>N23511BC</b>
M1 (18)	<b>23501M1</b>	<b>N23501M1</b>
M3 (28)	<b>23504M3</b>	<b>N23504M3</b>
M5 (28)	<b>23509M5</b>	<b>N23509M5</b>
Mini (28)	<b>23509MN</b>	<b>N23509MN</b>

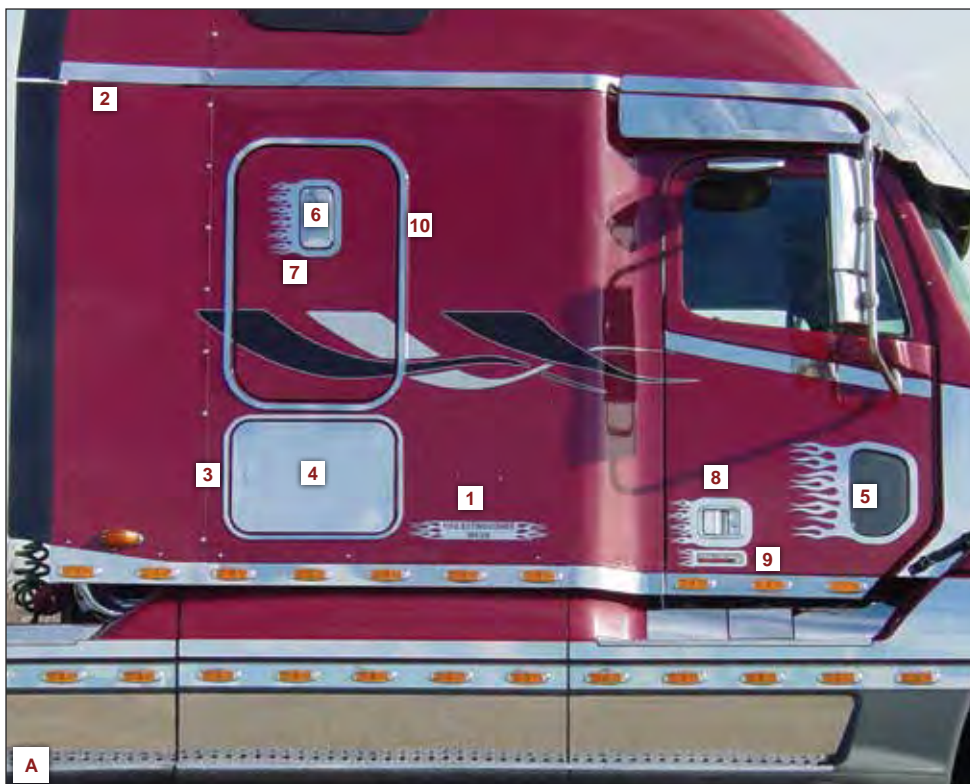

See page 33 for Rear Frame Covers.  
Pages 363 - 367 for Flap Light  
Bars, Flap Weights, Anti-Sails.

Pages 355 - 363 for Rear Light Bars.  
Pages 346 - 354 for Rear Center Panels.