

VENT TRIMS


Fits Century / Columbia (Each)

- A. 1 - Sleeper Vent Trim Ring**
23095 N23095
2 - Vent Cover with Sides
23094 N23094

STORAGE DOOR TRIMS

Fits Century / Columbia [2003 & Earlier] (Each)

- B. 1 - Storage Door Latch Trim**
23092 N23092
 Driver Side Storage Door Cover
23101 N23101
 Passenger Side Storage Door Cover
C. 23102 N23102

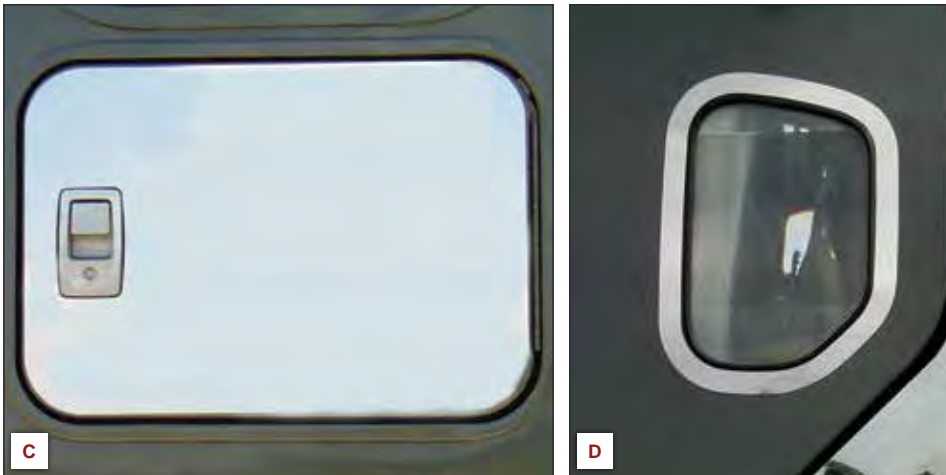

VIEW WINDOW TRIMS

Fits Century / Columbia (Each)

- Blank
D. 23088 N23088
 With Flames
23107 N23107

EXTENSION TRIMS

Fits Century / Columbia (Kit)

- E. 1 - Vertical Side Wing Extension - Does not fit wings with factory rubber.**
23097 N23097
2 - 70" Upper Sleeper Trim With Large Extension
23086 N23086
 70" Upper Sleeper Trim With Small Extension
23087 N23087



LATCH AND LOGO TRIMS

Fits Century / Columbia (Pair)

- F. 1 - Door Latch Trims, Blank**
23090 N23090
2 - Century Class Logo Trims, Blank
23089 N23089
 Door Latch Trims With Flames
20459 N20459
 Century Class Logo Trims With Flames
23112 N23112



N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.



ABOVE DOOR TRIMS (Pair)

- E. 1 - Tape Mount (Rear Stack) [2003 & Earlier]**

23077-11	N23077-11
-----------------	------------------

 (Side Stack)

23177-11	N23177-11
-----------------	------------------
- F. 1 - Tape Mount (Rear Stack) [2003 & Earlier]**

23080	N23080
--------------	---------------

 (Side Stack)

23180	N23180
--------------	---------------

CENTURY / COLUMBIA TOP OF DOOR TRIMS
Chopped look. (Pair)

POLISHED FINISH

- 2 - 6" - Top of Door Trim**

23020	N23020
--------------	---------------
- 7" - Top of Door Trim**

23022	N23022
--------------	---------------

SANDED FINISH

- 6" - Top of Door Trim**

23021	N23021
--------------	---------------
- 7" - Top of Door Trim**

23023	N23023
--------------	---------------

UNDER WINDOW TRIMS (Pair)

- 3 - Side Door Accents**

23085	N23085
--------------	---------------

SIDE COWL TRIMS (Pair)

- 4 - Columbia (2003 & Earlier)**

23116	N23116
--------------	---------------

 Century (2003 & Earlier)

23084	N23084
--------------	---------------

DOOR HANDLE TRIMS / LOGO TRIMS
Fits Classic, FLD, Century/Columbia. (Pair)

- 5 - With Flames**

20459	N20459
--------------	---------------

 Blank

23090	N23090
--------------	---------------

 Logo Trims, Blank

23113	N23113
--------------	---------------
- 6 - Logo Trims, with Flames**

23114	N23114
--------------	---------------

CENTURY / COLUMBIA CAB PANELS
Mounts to bottom of door. (Pair)

- | | | |
|--------------------------|----------------|-----------------|
| Blank (0) | 26530 | N26530 |
| 7 - Supernova (6) | 26531 | N26531 |
| Crew (6) | 26533 | N26533 |
| 2" Round Flat (8) | 26534B | N26534B |
| 2" Round Beehive (8) | 26535B | N26535B |
| Challenger (8) | 26539B | N26539B |
| Bulls-Eye (8) | 26540B | N26540B |
| 3/4" Button (8) | 26540GB | N26540GB |
| Fusion (8) | 26541BC | N26541BC |
| M1 (6) | 26531M1 | N26531M1 |
| M3 (8) | 26534M3 | N26534M3 |
| M5 (8) | 26539M5 | N26539M5 |
| Mini (8) | 26539MN | N26539MN |

CENTURY LOWER GRILLE INSERT
Fits Century, Columbia and FLD. (Each)

- Lower Grille Flames Insert
G. 23138 **N23138**



See page 41 for Century/Columbia Sleeper Panels.



*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

FIRE EXTINGUISHER INSIDE (Each)

- A. **1** - "Fire Extinguisher Inside" Sign
With Flames 19.5" X 2.667"
10878 N10878

UPPER SLEEPER TRIMS (Kit)

- 2** - 70" Sleeper With Large Wing
23086 N23086
70" Sleeper With Small Wing
23087 N23087

STORAGE DOOR TRIMS (Each)

- 3** - Surround Trim
23105 N23105

STORAGE DOOR COVER [2004 & Newer] (Each)

- 4** - Door Cover, Without Handle Cutout
23103 N23103

VIEW WINDOW TRIMS (Each)

- 5** - With Flames
23107 N23107
Blank
23088 N23088

VENT COVER AND RING TRIM (Each)

- 6** - Century And Columbia Vent Cover With Sides
23094 N23094
7 - Vent Trim Ring With Flames
23115 N23115
Vent Trim Ring, Blank
23095 N23095

DOOR HANDLE TRIMS / COLUMBIA LOGO TRIMS (Pair)

- 8** - Door Handle Surrounds With Flames
20459 N20459
Door Handle Surrounds, Blank
23090 N23090
9 - "Columbia" Logo Trims With Flames
23114 N23114
"Columbia" Logo Trims, Blank
23113 N23113

SLEEPER DOOR TRIM (Each)

- 10** - Sleeper Door Trim, for Century / Columbia
23106 N23106

CENTURY / COLUMBIA / CONDO REAR VERTICAL EXTENSIONS

Will not fit trucks with factory rubber installed on extensions. (Pair)

Blank (0)	23500	N23500
Supernova (18)	23501	N23501
Crew (18)	23503	N23503
2" Round Flat (28)	23504B	N23504B
2" Round Beehive (28)	23505B	N23505B
B. Challenger (28)	23509B	N23509B
Bulls-Eye (28)	23510B	N23510B
3/4" Button (28)	23510GB	N23510GB
Fusion (28)	23511BC	N23511BC
M1 (18)	23501M1	N23501M1
M3 (28)	23504M3	N23504M3
M5 (28)	23509M5	N23509M5
Mini (28)	23509MN	N23509MN



See page 33 for Rear Frame Covers.
Pages 363 - 367 for Flap Light
Bars, Flap Weights, Anti-Sails.

Pages 355 - 363 for Rear Light Bars.
Pages 346 - 354 for Rear Center Panels.