

**VENT TRIMS**


Fits Century / Columbia (Each)

- A. 1 - Sleeper Vent Trim Ring**  
**23095      N23095**  
**2 - Vent Cover with Sides**  
**23094      N23094**

**STORAGE DOOR TRIMS**

Fits Century / Columbia [2003 & Earlier] (Each)

- B. 1 - Storage Door Latch Trim**  
**23092      N23092**  
 Driver Side Storage Door Cover  
**23101      N23101**  
 Passenger Side Storage Door Cover  
**C. 23102      N23102**

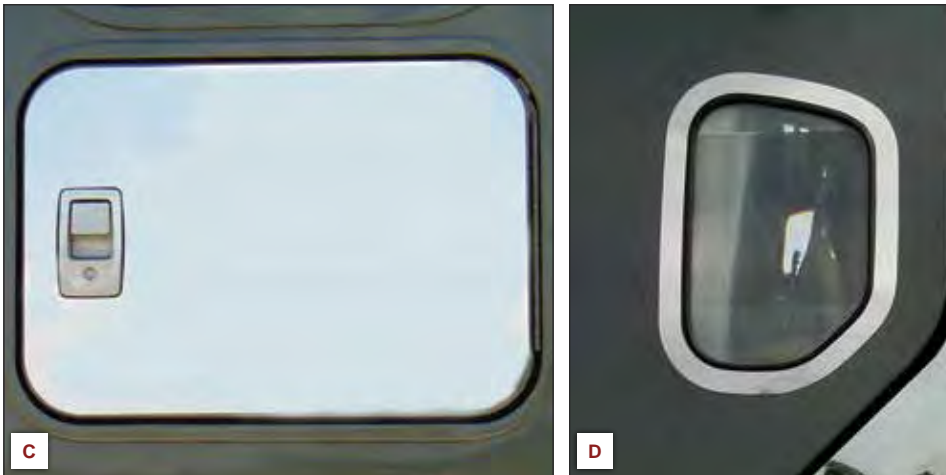

**VIEW WINDOW TRIMS**

Fits Century / Columbia (Each)

- Blank  
**D. 23088      N23088**  
 With Flames  
**23107      N23107**

**EXTENSION TRIMS**

Fits Century / Columbia (Kit)

- E. 1 - Vertical Side Wing Extension - Does not fit wings with factory rubber.**  
**23097      N23097**  
**2 - 70" Upper Sleeper Trim With Large Extension**  
**23086      N23086**  
 70" Upper Sleeper Trim With Small Extension  
**23087      N23087**



**LATCH AND LOGO TRIMS**

Fits Century / Columbia (Pair)

- F. 1 - Door Latch Trims, Blank**  
**23090      N23090**  
**2 - Century Class Logo Trims, Blank**  
**23089      N23089**  
 Door Latch Trims With Flames  
**20459      N20459**  
 Century Class Logo Trims With Flames  
**23112      N23112**



**N** \*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

### FIRE EXTINGUISHER INSIDE (Each)

- A. 1 - "Fire Extinguisher Inside" Sign**  
With Flames 19.5" X 2.667"  
**10878 N10878**

### UPPER SLEEPER TRIMS (Kit)

- 2 - 70" Sleeper With Large Wing**  
**23086 N23086**  
70" Sleeper With Small Wing  
**23087 N23087**

### STORAGE DOOR TRIMS (Each)

- 3 - Surround Trim**  
**23105 N23105**

### STORAGE DOOR COVER [2004 & Newer] (Each)

- 4 - Door Cover, Without Handle Cutout**  
**23103 N23103**

### VIEW WINDOW TRIMS (Each)

- 5 - With Flames**  
**23107 N23107**  
Blank  
**23088 N23088**

### VENT COVER AND RING TRIM (Each)

- 6 - Century And Columbia Vent Cover With Sides**  
**23094 N23094**  
**7 - Vent Trim Ring With Flames**  
**23115 N23115**  
Vent Trim Ring, Blank  
**23095 N23095**

### DOOR HANDLE TRIMS / COLUMBIA LOGO TRIMS (Pair)

- 8 - Door Handle Surrounds With Flames**  
**20459 N20459**  
Door Handle Surrounds, Blank  
**23090 N23090**  
**9 - "Columbia" Logo Trims With Flames**  
**23114 N23114**  
"Columbia" Logo Trims, Blank  
**23113 N23113**

### SLEEPER DOOR TRIM (Each)

- 10 - Sleeper Door Trim, for Century / Columbia**  
**23106 N23106**

### CENTURY / COLUMBIA / CONDO REAR VERTICAL EXTENSIONS

Will not fit trucks with factory rubber installed on extensions. (Pair)

Blank (0)	<b>23500</b>	<b>N23500</b>
Supernova (18)	<b>23501</b>	<b>N23501</b>
Crew (18)	<b>23503</b>	<b>N23503</b>
2" Round Flat (28)	<b>23504B</b>	<b>N23504B</b>
2" Round Beehive (28)	<b>23505B</b>	<b>N23505B</b>
<b>B. Challenger (28)</b>	<b>23509B</b>	<b>N23509B</b>
Bulls-Eye (28)	<b>23510B</b>	<b>N23510B</b>
3/4" Button (28)	<b>23510GB</b>	<b>N23510GB</b>
Fusion (28)	<b>23511BC</b>	<b>N23511BC</b>
M1 (18)	<b>23501M1</b>	<b>N23501M1</b>
M3 (28)	<b>23504M3</b>	<b>N23504M3</b>
M5 (28)	<b>23509M5</b>	<b>N23509M5</b>
Mini (28)	<b>23509MN</b>	<b>N23509MN</b>



See page 33 for Rear Frame Covers.  
Pages 363 - 367 for Flap Light  
Bars, Flap Weights, Anti-Sails.

Pages 355 - 363 for Rear Light Bars.  
Pages 346 - 354 for Rear Center Panels.