

**FLAT TOP / ULTRACAB BLIND MOUNT VISORS
FOR 2 PIECE FLAT WINDSHIELDS**

When replacing factory fiberglass visor, existing holes will not be reused. Factory Fiberglass Visor Bracket Locations will be visible.

FLAT TOP / ULTRA CAB BLIND MOUNT VISORS

Fits 325, 330, 335, 337, 340, 347, 348, 357, 365, 367, 375, 377, 378, 379, 382, 384, 385, 386, 388, 389 Flat Top and Ultra Cab. Add an "L" to your part number to order a louvered visor. (Kit)

CAB & DOOR MOUNTED MIRRORS

[1987-2014] Does not fit 2014 & Newer "Pride and Class" edition 388 / 389 trucks.

14" BLIND MOUNT DROP VISOR [Kit]

A. Blank (0)	35065	N35065
3/4 Button (10)	35065LT0	N35065LT0
B. Bulls-Eye (10)	35065LT1	N35065LT1

BLIND MOUNT MONSTER DROP BOW-TIE DROP VISOR [Kit]

Monster Drop Bow-Tie	35066	N35066
----------------------	--------------	---------------

11" BLIND MOUNT DROP VISOR [Kit]

Blank (0)	35067	N35067
3/4 Button (10)	35067LT0	N35067LT0
Bulls-Eye (10)	35067LT1	N35067LT1

BLIND MOUNT REGULAR DROP BOW-TIE DROP VISOR [Kit]

Regular Drop Bow-Tie Visor	35068	N35068
----------------------------	--------------	---------------

See pages 56 - 58 for Pride and Class Edition Drop Visors [2014 & Newer]

ULTRACAB BLIND MOUNT VISORS

Fits 377, 378, 379, 384, 385, 386, 388 and 389. Add an "L" to your part number to order a louvered visor. (Kit)

CAB MOUNTED MIRRORS [2005 & NEWER]

Does not fit 2014 & Newer "Pride and Class" edition 388 / 389 trucks.

14.5" BLIND MOUNT DROP VISOR [Kit]

Blank (0)	35022	N35022
3/4 Button (10)	35022LT0	N35022LT0
Bulls-Eye (10)	35022LT1	N35022LT1

BLIND MOUNT MONSTER DROP BOW-TIE DROP VISOR [Kit]


C. Monster Drop Bow-Tie	35030	N35030
--------------------------------	--------------	---------------

11" BLIND MOUNT DROP VISOR [Kit]

D. Blank (0)	35023	N35023
E. 3/4 Button (10)	35023LT0	N35023LT0
Bulls-Eye (10)	35023LT1	N35023LT1

BLIND MOUNT REGULAR DROP BOW-TIE DROP VISOR [Kit]

Regular Drop Bow-Tie Visor	35031	N35031
----------------------------	--------------	---------------

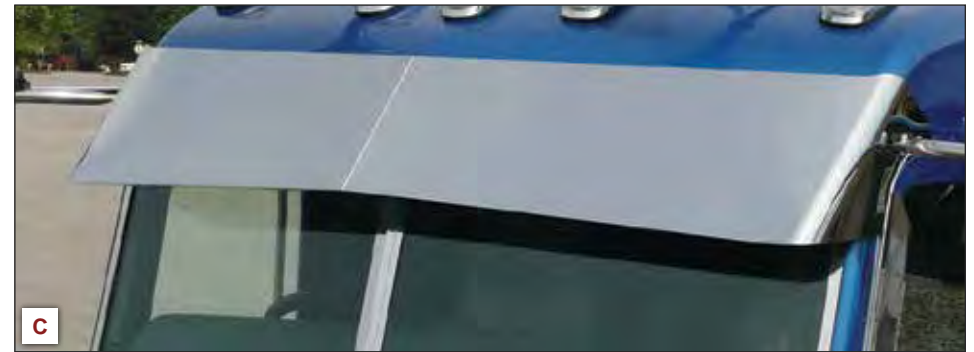



When replacing factory fiberglass visor, existing holes will not be reused. Factory Fiberglass Visor Bracket Locations will be visible.

ULTRACAB BLIND MOUNT VISORS

Fits 377, 378, 379, 384, 385, 386, 388 and 389. Add an "L" to your part number to order a louvered visor. (Kit)

CAB MOUNTED MIRRORS [2005 & NEWER]

Does not fit 2014 & Newer "Pride and Class" edition 388 / 389 trucks.

Blind Mount Regular Drop Bow-Tie Visor

F. 35031 N35031

PETERBILT

See pages 56 - 58 for Pride and Class Edition Drop Visors [2014 & Newer]



DOOR MOUNTED MIRRORS [1995-2006]

14.5" BLIND MOUNT DROP VISOR [Kit]

G. Blank (0)	35024	N35024
H. 3/4 Button (10)	35024LT0	N35024LT0
I. Bulls-Eye (10)	35024LT1	N35024LT1

BLIND MOUNT MONSTER DROP BOW-TIE DROP VISOR [Kit]

Monster Drop Bow-Tie **35032 N35032**

11" BLIND MOUNT DROP VISOR [Kit]

Blank (0)	35025	N35025
3/4 Button (10)	35025LT0	N35025LT0
Bulls-Eye (10)	35025LT1	N35025LT1

BLIND MOUNT REGULAR DROP BOW-TIE DROP VISOR [Kit]

Regular Drop Bow-Tie Visor **35033 N35033**



To keep your equipment looking great use RoadWorks Detail Products, seen on pages 292 - 295.

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.