



F

When replacing factory fiberglass visor, existing holes will not be reused. Factory Fiberglass Visor Bracket Locations will be visible.

FLAT TOP BLIND MOUNT VISORS

Fits 325, 330, 335, 337, 340, 347, 348, 357, 365, 367, 375, 377, 378, 379, 382, 384, 385, 386, 388 and 389. Add an "L" to your part number to order a louvered visor. (Kit)

CAB MOUNTED MIRRORS [2005 & NEWER]

Does not fit 2014 & Newer "Pride and Class" edition 388 / 389 trucks.

13.5" BLIND MOUNT DROP VISOR [Kit]

F. Blank (0)	35026	N35026
G. 3/4 Button (10)	35026LT0	N35026LT0
Bulls-Eye (10)	35026LT1	N35026LT1

BLIND MOUNT MONSTER DROP BOW-TIE DROP VISOR [Kit]

Monster Drop Bow-Tie	35034	N35034
----------------------	-------	--------


11" BLIND MOUNT DROP VISOR [Kit]

Blank (0)	35027	N35027
3/4 Button (10)	35027LT0	N35027LT0
Bulls-Eye (10)	35027LT1	N35027LT1

BLIND MOUNT REGULAR DROP BOW-TIE DROP VISOR [Kit]

H. Regular Drop Bow-Tie Visor	35035	N35035
-------------------------------	-------	--------

See pages 66 - 68 for Pride and Class Edition Drop Visors [2014 & Newer]

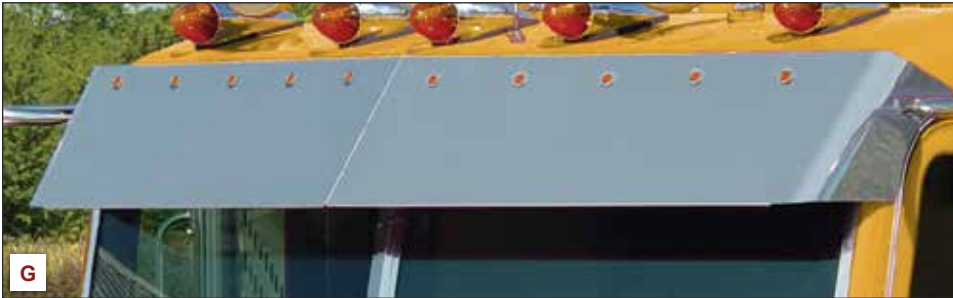

G



H



I

FLAT TOP BLIND MOUNT VISORS

Fits 330, 335, 340, 357, 365, 367, 378, 379, 385, 388 and 389. Add an "L" to your part number to order a louvered visor. (Kit)

DOOR MOUNTED MIRRORS [1988 - 2005]

13.5" BLIND MOUNT DROP VISOR [Kit]

Blank (0)	35028	N35028
3/4 Button (10)	35028LT0	N35028LT0
Bulls-Eye (10)	35028LT1	N35028LT1

BLIND MOUNT MONSTER DROP BOW-TIE DROP VISOR [Kit]

I. Monster Drop Bow-Tie	35036	N35036
-------------------------	-------	--------

11" BLIND MOUNT DROP VISOR [Kit]

J. Blank (0)	35029	N35029
K. 3/4 Button (10)	35029LT0	N35029LT0
Bulls-Eye (10)	35029LT1	N35029LT1

BLIND MOUNT REGULAR DROP BOW-TIE DROP VISOR [Kit]

Regular Drop Bow-Tie Visor	35037	N35037
----------------------------	-------	--------



J



K

*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

PETERBILT

FLAT TOP / ULTRACAB BLIND MOUNT VISORS FOR 2 PIECE FLAT WINDSHIELDS

When replacing factory fiberglass visor, existing holes will not be reused. Factory Fiberglass Visor Bracket Locations will be visible.

FLAT TOP / ULTRA CAB BLIND MOUNT VISORS

Fits 325, 330, 335, 337, 340, 347, 348, 357, 365, 367, 375, 377, 378, 379, 382, 384, 385, 386, 388, 389 Flat Top and Ultra Cab. Add an "L" to your part number to order a louvered visor. (Kit)

CAB & DOOR MOUNTED MIRRORS

[1987-2014] Does not fit 2014 & Newer "Pride and Class" edition 388 / 389 trucks.

14" BLIND MOUNT DROP VISOR [Kit]

A. Blank (0)	35065	N35065
3/4 Button (10)	35065LT0	N35065LT0
B. Bulls-Eye (10)	35065LT1	N35065LT1

BLIND MOUNT MONSTER DROP BOW-TIE DROP VISOR [Kit]

Monster Drop Bow-Tie	35066	N35066
----------------------	--------------	---------------

11" BLIND MOUNT DROP VISOR [Kit]

Blank (0)	35067	N35067
3/4 Button (10)	35067LT0	N35067LT0
Bulls-Eye (10)	35067LT1	N35067LT1

BLIND MOUNT REGULAR DROP BOW-TIE DROP VISOR [Kit]

Regular Drop Bow-Tie Visor	35068	N35068
----------------------------	--------------	---------------

See pages 66 - 68 for Pride and Class Edition Drop Visors [2014 & Newer]

ULTRACAB BLIND MOUNT VISORS

Fits 377, 378, 379, 384, 385, 386, 388 and 389. Add an "L" to your part number to order a louvered visor. (Kit)

CAB MOUNTED MIRRORS [2005 & NEWER]

Does not fit 2014 & Newer "Pride and Class" edition 388 / 389 trucks.

14.5" BLIND MOUNT DROP VISOR [Kit]

Blank (0)	35022	N35022
3/4 Button (10)	35022LT0	N35022LT0
Bulls-Eye (10)	35022LT1	N35022LT1

BLIND MOUNT MONSTER DROP BOW-TIE DROP VISOR [Kit]

C. Monster Drop Bow-Tie	35030	N35030
--------------------------------	--------------	---------------

11" BLIND MOUNT DROP VISOR [Kit]

D. Blank (0)	35023	N35023
E. 3/4 Button (10)	35023LT0	N35023LT0
Bulls-Eye (10)	35023LT1	N35023LT1

BLIND MOUNT REGULAR DROP BOW-TIE DROP VISOR [Kit]

Regular Drop Bow-Tie Visor	35031	N35031
----------------------------	--------------	---------------

