

359 DARWIN VISORS [1973-1987] (Kit)

10.5" BLIND MOUNT DARWIN VISORS [Kit]

E.	Blank (0)	35590	N35590
	Front Lights		
F.	3/4 Button (10)	35590LT0	N35590LT0
	Front Lights		
	Bulls-Eye (10)	35590LT1	N35590LT1
	Top Lights		
	3/4 Button (10)	35590LT2	N35590LT2
	Top Lights		
	Bulls-Eye (10)	35590LT3	N35590LT3

BLIND MOUNT DARWIN BOW-TIE VISOR [Kit]

G.	Darwin Bow-Tie Visor	35591	N35591
-----------	----------------------	-------	--------

BLIND MOUNT DARWIN UN-TIE VISORS [Kit]

H.	Blank (0)	35592	N35592
	Front Lights		
	3/4 Button (10)	35592LT0	N35592LT0
	Front Lights		
I.	Bulls-Eye (10)	35592LT1	N35592LT1
	Top Lights		
	3/4 Button (10)	35592LT2	N35592LT2
	Top Lights		
	Bulls-Eye (10)	35592LT3	N35592LT3



POST MOUNT 359 DARWIN VISORS [1973-1987] (Kit)

11" BLIND MOUNT DARWIN VISORS [Kit]

	Blank (0)	35610	N35610
	Front Lights		
	3/4 Button (10)	35610LT0	N35610LT0
	Front Lights		
	Bulls-Eye (10)	35610LT1	N35610LT1
	Top Lights		
	3/4 Button (10)	35610LT2	N35610LT2
	Top Lights		
	Bulls-Eye (10)	35610LT3	N35610LT3

BLIND MOUNT DARWIN BOW-TIE VISOR [Kit]

	Darwin Bow-Tie Visor	35611	N35611
--	----------------------	-------	--------

BLIND MOUNT DARWIN UN-TIE VISORS [Kit]

J.	Blank (0)	35612	N35612
	Front Lights		
	3/4 Button (10)	35612LT0	N35612LT0
	Front Lights		
	Bulls-Eye (10)	35612LT1	N35612LT1
	Top Lights		
	3/4 Button (10)	35612LT2	N35612LT2
	Top Lights		
	Bulls-Eye (10)	35612LT3	N35612LT3

BLIND MOUNT DARWIN BOW-TIE VISOR [Kit]

	Darwin Bow-Tie Visor	35613	N35613
--	----------------------	-------	--------

*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.



D



E



F




G



H



I

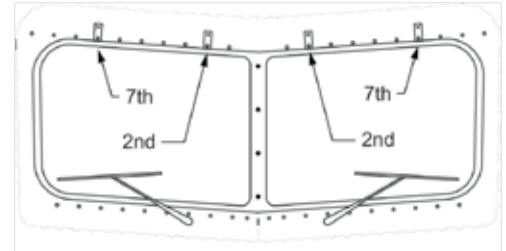

359 BLIND MOUNT VISORS [1973 & Newer] (Kit)

- 11" Blind Mount Drop Visor
D. **35045** **N35045**

- 13" Blind Mount Drop Visor
E. **35046** **N35046**

- Old School Blind Mount Bow-Tie Visor
F. **35047** **N35047**

- Regular Drop Blind Mount Bow-Tie Visor
35048 **N35048**

- Monster Drop Blind Mount Bow-Tie Visor
35049 **N35049**

- Darwin Visor
35590 **N35590**

- Darwin Bow-Tie
35591 **N35591**

359 STANDARD MOUNT VISORS [1973 & Newer] (Kit)

- 11" Drop Visor
35040 **N35040**

- 13" Drop Visor
35041 **N35041**

- Old School Bow-Tie Visor
G. **35042** **N35042**

- Monster Drop Bow-Tie Visor
35043 **N35043**

359 DARWIN VISOR
[1973-1987] (Kit)

- 10.5" Blind Mount Darwin Visor
35590 **N35590**

- Blind Mount Darwin Bow-Tie Visor
35591 **N35591**

- Blind Mount Darwin Un-Tie Visor
H. **35592** **N35592**

POST MOUNT 359 DARWIN VISOR
[1973-1987] (Kit)

- 11" Blind Mount Darwin Visor
35610 **N35610**

- Blind Mount Darwin Bow-Tie Visor
35611 **N35611**

- Blind Mount Darwin Un-Tie Visor
I. **35612** **N35612**

- Blind Mount Darwin Top-Tie Visor
35613 **N35613**

See pages 63, 64 for more 359 Visors.

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.