

359 VISORS

359 STANDARD MOUNT VISORS

Also fits 340, 348, 349, 358 and 359. [1973-1987] (Kit)

13" Drop Visor

35041 N35041

Monster Drop Bow-Tie Visor

35043 N35043

11" Drop Visor

35040 N35040

Old School Bow-Tie Visor

35042 N35042

359 BLIND MOUNT VISORS (Kit)

13" BLIND MOUNT DROP VISORS [Kit]

- A.** Blank (0) **35046 N35046**
- 3/4 Button (10) **35046LT0 N35046LT0**
- B.** Bulls-Eye (10) **35046LT1 N35046LT1**

MONSTER DROP BOW-TIE VISOR [Kit]

Monster Drop Bow-Tie Visor **35049 N35049**

11" BLIND MOUNT DROP VISORS [Kit]

- C.** Blank (0) **35045 N35045**
- D.** 3/4 Button (10) **35045LT0 N35045LT0**
- Bulls-Eye (10) **35045LT1 N35045LT1**

REGULAR DROP BOW-TIE VISOR [Kit]

Regular Drop Bow-Tie Visor **35048 N35048**

OLD SCHOOL BOW-TIE VISOR [Kit]

- E.** Old School Bow-Tie Visor **35047 N35047**



[1973 & Newer] 359 Factory Bracket Locations

OLD SCHOOL BLIND MOUNT VISORS (Kit)

When replacing factory fiberglass visor, existing holes will not be reused. Factory Fiberglass Visor Bracket Locations will Be visible.

CAB AND DOOR MOUNTED MIRRORS

Fits 330, 335, 340, 357, 365, 367, 377, 378, 379, 384, 385, 386, 388, and 389. [1988-2014]

Old School Blind Mount Bow-Tie

F. 35600 N35600

CAB MOUNTED MIRRORS

Fits 330, 335, 340, 357, 365, 367, 378, 379, 384, 385, 386, 388, and 389. [2005-2013]



Old School Blind Mount Bow-Tie

G. 35601 N35601

DOOR MOUNTED MIRRORS - Fits 330, 357, 377, 378, 379, and 385. [2004 & Earlier]

Old School Blind Mount Bow-Tie

35602 N35602

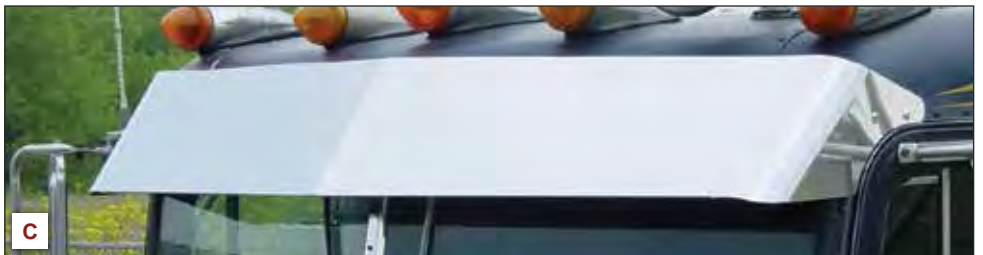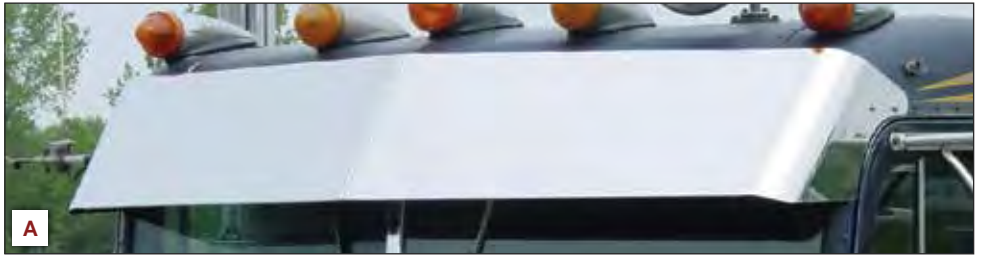



D



E



F




G



H



I

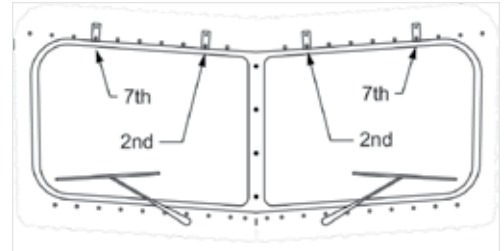

359 BLIND MOUNT VISORS [1973 & Newer] (Kit)

- 11" Blind Mount Drop Visor
- D. 35045 N35045**

- 13" Blind Mount Drop Visor
- E. 35046 N35046**

- Old School Blind Mount Bow-Tie Visor
- F. 35047 N35047**

- Regular Drop Blind Mount Bow-Tie Visor
- 35048 N35048**

- Monster Drop Blind Mount Bow-Tie Visor
- 35049 N35049**

- Darwin Visor
- 35590 N35590**

- Darwin Bow-Tie
- 35591 N35591**

359 STANDARD MOUNT VISORS [1973 & Newer] (Kit)

- 11" Drop Visor
- 35040 N35040**

- 13" Drop Visor
- 35041 N35041**

- Old School Bow-Tie Visor
- G. 35042 N35042**

- Monster Drop Bow-Tie Visor
- 35043 N35043**

359 DARWIN VISOR
[1973-1987] (Kit)

- 10.5" Blind Mount Darwin Visor
- 35590 N35590**

- Blind Mount Darwin Bow-Tie Visor
- 35591 N35591**

- Blind Mount Darwin Un-Tie Visor
- H. 35592 N35592**

POST MOUNT 359 DARWIN VISOR
[1973-1987] (Kit)

- 11" Blind Mount Darwin Visor
- 35610 N35610**

- Blind Mount Darwin Bow-Tie Visor
- 35611 N35611**

- Blind Mount Darwin Un-Tie Visor
- I. 35612 N35612**

- Blind Mount Darwin Top-Tie Visor
- 35613 N35613**

See pages 63, 64 for more 359 Visors.

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.