



359 DARWIN VISORS [1973-1987] (Kit)

10.5" BLIND MOUNT DARWIN VISORS [Kit]

E.	Blank (0)	35590	N35590
	Front Lights		
F.	3/4 Button (10)	35590LT0	N35590LT0
	Front Lights		
	Bulls-Eye (10)	35590LT1	N35590LT1
	Top Lights		
	3/4 Button (10)	35590LT2	N35590LT2
	Top Lights		
	Bulls-Eye (10)	35590LT3	N35590LT3

BLIND MOUNT DARWIN BOW-TIE VISOR [Kit]

G.	Darwin Bow-Tie Visor	35591	N35591
-----------	----------------------	-------	--------

BLIND MOUNT DARWIN UN-TIE VISORS [Kit]

H.	Blank (0)	35592	N35592
	Front Lights		
	3/4 Button (10)	35592LT0	N35592LT0
	Front Lights		
I.	Bulls-Eye (10)	35592LT1	N35592LT1
	Top Lights		
	3/4 Button (10)	35592LT2	N35592LT2
	Top Lights		
	Bulls-Eye (10)	35592LT3	N35592LT3



POST MOUNT 359 DARWIN VISORS [1973-1987] (Kit)

11" BLIND MOUNT DARWIN VISORS [Kit]

	Blank (0)	35610	N35610
	Front Lights		
	3/4 Button (10)	35610LT0	N35610LT0
	Front Lights		
	Bulls-Eye (10)	35610LT1	N35610LT1
	Top Lights		
	3/4 Button (10)	35610LT2	N35610LT2
	Top Lights		
	Bulls-Eye (10)	35610LT3	N35610LT3

BLIND MOUNT DARWIN BOW-TIE VISOR [Kit]

	Darwin Bow-Tie Visor	35611	N35611
--	----------------------	-------	--------

BLIND MOUNT DARWIN UN-TIE VISORS [Kit]

J.	Blank (0)	35612	N35612
	Front Lights		
	3/4 Button (10)	35612LT0	N35612LT0
	Front Lights		
	Bulls-Eye (10)	35612LT1	N35612LT1
	Top Lights		
	3/4 Button (10)	35612LT2	N35612LT2
	Top Lights		
	Bulls-Eye (10)	35612LT3	N35612LT3

BLIND MOUNT DARWIN BOW-TIE VISOR [Kit]

	Darwin Bow-Tie Visor	35613	N35613
--	----------------------	-------	--------

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.



D



E



F




G



H



I

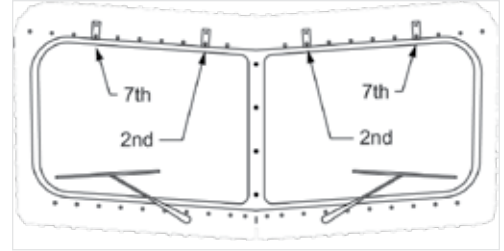

359 BLIND MOUNT VISORS [1973 & Newer] (Kit)

- 11" Blind Mount Drop Visor
D. 35045 N35045

- 13" Blind Mount Drop Visor
E. 35046 N35046

- Old School Blind Mount Bow-Tie Visor
F. 35047 N35047

- Regular Drop Blind Mount Bow-Tie Visor
35048 N35048

- Monster Drop Blind Mount Bow-Tie Visor
35049 N35049

- Darwin Visor
35590 N35590

- Darwin Bow-Tie
35591 N35591

359 STANDARD MOUNT VISORS [1973 & Newer] (Kit)

- 11" Drop Visor
35040 N35040

- 13" Drop Visor
35041 N35041

- Old School Bow-Tie Visor
G. 35042 N35042

- Monster Drop Bow-Tie Visor
35043 N35043

359 DARWIN VISOR
[1973-1987] (Kit)

- 10.5" Blind Mount Darwin Visor
35590 N35590

- Blind Mount Darwin Bow-Tie Visor
35591 N35591

- Blind Mount Darwin Un-Tie Visor
H. 35592 N35592

POST MOUNT 359 DARWIN VISOR
[1973-1987] (Kit)

- 11" Blind Mount Darwin Visor
35610 N35610

- Blind Mount Darwin Bow-Tie Visor
35611 N35611

- Blind Mount Darwin Un-Tie Visor
I. 35612 N35612

- Blind Mount Darwin Top-Tie Visor
35613 N35613

See pages 73, 74 for more 359 Visors.

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.