

**359 VISORS**

**359 STANDARD MOUNT VISORS**

Also fits 340, 348, 349, 358 and 359. [1973-1987] (Kit)

13" Drop Visor

**35041 N35041**

Monster Drop Bow-Tie Visor

**35043 N35043**

11" Drop Visor

**35040 N35040**

Old School Bow-Tie Visor

**35042 N35042**

**359 BLIND MOUNT VISORS (Kit)**

**13" BLIND MOUNT DROP VISORS [Kit]**

- A.** Blank (0) **35046 N35046**
- 3/4 Button (10) **35046LT0 N35046LT0**
- B.** Bulls-Eye (10) **35046LT1 N35046LT1**

**MONSTER DROP BOW-TIE VISOR [Kit]**

Monster Drop Bow-Tie Visor **35049 N35049**

**11" BLIND MOUNT DROP VISORS [Kit]**

- C.** Blank (0) **35045 N35045**
- D.** 3/4 Button (10) **35045LT0 N35045LT0**
- Bulls-Eye (10) **35045LT1 N35045LT1**

**REGULAR DROP BOW-TIE VISOR [Kit]**

Regular Drop Bow-Tie Visor **35048 N35048**

**OLD SCHOOL BOW-TIE VISOR [Kit]**

- E.** Old School Bow-Tie Visor **35047 N35047**



[1973 & Newer] 359 Factory Bracket Locations

**OLD SCHOOL BLIND MOUNT VISORS (Kit)**

*When replacing factory fiberglass visor, existing holes will not be reused. Factory Fiberglass Visor Bracket Locations will Be visible.*

**CAB AND DOOR MOUNTED MIRRORS**

Fits 330, 335, 340, 357, 365, 367, 377, 378, 379, 384, 385, 386, 388, and 389. [1988-2014]

- F.** Old School Blind Mount Bow-Tie **35600 N35600**


**CAB MOUNTED MIRRORS**

Fits 330, 335, 340, 357, 365, 367, 378, 379, 384, 385, 386, 388, and 389. [2005-2013]

- G.** Old School Blind Mount Bow-Tie **35601 N35601**

**DOOR MOUNTED MIRRORS - Fits 330, 357, 377, 378, 379, and 385. [2004 & Earlier]**

- Old School Blind Mount Bow-Tie **35602 N35602**

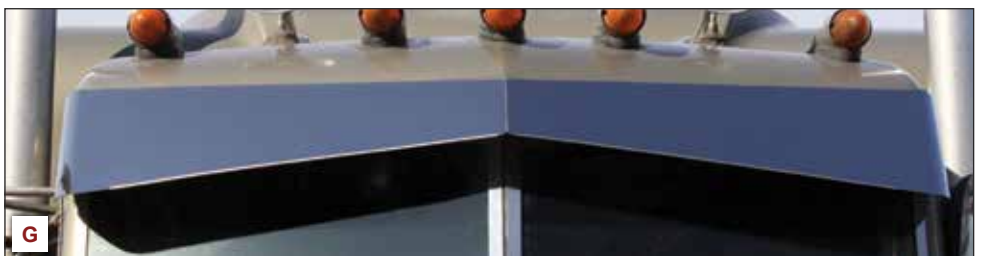



D



E



F




G



H



I

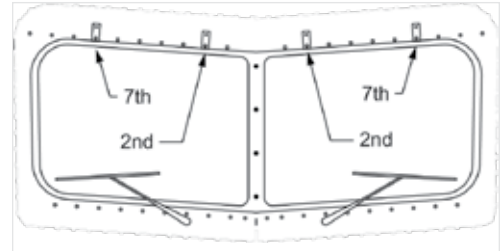

**359 BLIND MOUNT VISORS** [1973 & Newer] (Kit)

- 11" Blind Mount Drop Visor  
D. **35045**    **N35045**

---

- 13" Blind Mount Drop Visor  
E. **35046**    **N35046**

---

- Old School Blind Mount Bow-Tie Visor  
F. **35047**    **N35047**

---

- Regular Drop Blind Mount Bow-Tie Visor  
**35048**    **N35048**

---

- Monster Drop Blind Mount Bow-Tie Visor  
**35049**    **N35049**

---

- Darwin Visor  
**35590**    **N35590**

---

- Darwin Bow-Tie  
**35591**    **N35591**

---

**359 STANDARD MOUNT VISORS** [1973 & Newer] (Kit)

- 11" Drop Visor  
**35040**    **N35040**

---

- 13" Drop Visor  
**35041**    **N35041**

---

- Old School Bow-Tie Visor  
G. **35042**    **N35042**

---

- Monster Drop Bow-Tie Visor  
**35043**    **N35043**

---

**359 DARWIN VISOR**  
[1973-1987] (Kit)

- 10.5" Blind Mount Darwin Visor  
**35590**    **N35590**

---

- Blind Mount Darwin Bow-Tie Visor  
**35591**    **N35591**

---

- Blind Mount Darwin Un-Tie Visor  
H. **35592**    **N35592**

---

**POST MOUNT 359 DARWIN VISOR**  
[1973-1987] (Kit)

- 11" Blind Mount Darwin Visor  
**35610**    **N35610**

---

- Blind Mount Darwin Bow-Tie Visor  
**35611**    **N35611**

---

- Blind Mount Darwin Un-Tie Visor  
I. **35612**    **N35612**

---

- Blind Mount Darwin Top-Tie Visor  
**35613**    **N35613**

---

See pages 73, 74 for more 359 Visors.

N \*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.