

PETERBILT DOOR PERMIT PANELS (Pair)

14" Door Permit Panel
Fits trucks with door mounted mirrors. [2005 & Earlier]

- A. 30060 N30060**

- 7.375" x 5.5" Door Permit Panel
Fits trucks with cab mounted mirrors. [2005 & Earlier]
- 30066 N30066**



PETERBILT FRONT CORNER DOOR / WINDOW TRIMS (Pair)

Front Corner Door Window Trim
Fits 335, 357, 378, 379 and 385. [2005]

- B. 30146 N30146**

- Front Corner Door Window Trim
Fits trucks with sloped doors. [2006 & Newer]
- 30168 N30168**

FLAT TOP CAB SLEEPER ROOF TOP TRIM

63" Stand-Up Sleeper with Flat Top Cab (3-piece kit)
30161 N30161

Center Only for 63" Stand-Up with Flat Top Cab
30160 N30160

Sides Only for 63" Stand-Up with Flat Top Cab (Pair)
30161-11 N30161-11

ULTRA CAB SLEEPER ROOF TOP TRIM

63" Stand-Up Sleeper With Ultra Cab (3-piece kit)
C. 30163 N30163

Center Only for 63" Stand-Up with Ultra Cab
30162 N30162

Sides Only for 63" Stand-Up with Ultra Cab (Pair)
30163-11 N30163-11

70" UltraCab Sleeper (3-piece kit)
30164 N30164

Center Only for 70" Stand-Up with Ultra Cab
30162 N30162

Sides Only for 70" Stand-Up with Ultra Cab (Pair)
30164-11 N30164-11



OVAL VIEW WINDOW TRIMS

Fits 330, 357, 359, 377, 378, 379, 385 (all aluminum cabs).
Will not fit 387. [2005 & Earlier] (Each)

With Flames

- D. 30150 N30150**

Blank

- E. 30102 N30102**

RECTANGULAR VIEW WINDOW TRIMS

[2005 & Newer] (Each)

With Flames

- F. 30151 N30151**

Blank

- G. 30152 N30152**





SLEEPER ACCESSORIES
[2009 & Earlier] (Pair)

- Stack Guard Filler Trims
- B. 30156 N30156**

- Rear Vertical Wing Trim dimpled for rivets.
Fits 36", 48" and 63" Unibilt Sleepers.
- C. 30051 N30051**

ULTRA CAB SLEEPER ROOF TOP TRIM

- 63" Stand-Up Sleeper With Ultra Cab (3-piece kit)
- D. 30163 N30163**

- Center Only for 63" Stand-Up with Ultra Cab
- 30162 N30162**

- Sides Only for 63" Stand-Up with Ultra Cab (Pair)
- 30163-11 N30163-11**

- 70" UltraCab Sleeper (3-piece kit)
- 30164 N30164**

- Center Only for 70" Stand-Up with Ultra Cab
- 30162 N30162**

- Sides Only for 70" Stand-Up with Ultra Cab (Pair)
- 30164-11 N30164-11**

FLAT TOP CAB SLEEPER ROOF TOP TRIM

- 63" Stand-Up Sleeper with Flat Top Cab (3-piece kit)
- 30161 N30161**


- Center Only for 63" Stand-Up with Flat Top Cab
- 30160 N30160**

- Sides Only for 63" Stand-Up with Flat Top Cab (Pair)
- 30161-11 N30161-11**

IFTA STICKER BRACKETS (Pair)

- IFTA Sticker Bracket - Narrow
- E. 30030 N30030**

- IFTA Sticker Bracket - Wide
- F. 30031 N30031**

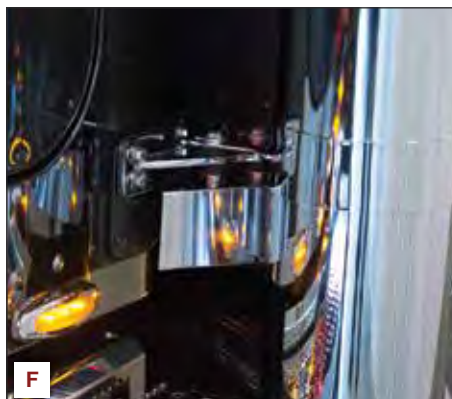

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.