

### PETERBILT DOOR PERMIT PANELS (Pair)

- 14" Door Permit Panel  
Fits trucks with door mounted mirrors. [2005 & Earlier]
- A. 30060 N30060**
- 
- 7.375" x 5.5" Door Permit Panel  
Fits trucks with cab mounted mirrors. [2005 & Earlier]
- 30066 N30066**



### PETERBILT FRONT CORNER DOOR / WINDOW TRIMS (Pair)

- Front Corner Door Window Trim  
Fits 335, 357, 378, 379 and 385. [2005]
- B. 30146 N30146**
- 
- Front Corner Door Window Trim  
Fits trucks with sloped doors. [2006 & Newer]
- 30168 N30168**

### FLAT TOP CAB SLEEPER ROOF TOP TRIM

- 63" Stand-Up Sleeper with Flat Top Cab (3-piece kit)
- 30161 N30161**
- 
- Center Only for 63" Stand-Up with Flat Top Cab
- 30160 N30160**
- 
- Sides Only for 63" Stand-Up with Flat Top Cab (Pair)
- 30161-11 N30161-11**




### ULTRA CAB SLEEPER ROOF TOP TRIM

- 63" Stand-Up Sleeper With Ultra Cab (3-piece kit)
- C. 30163 N30163**
- 
- Center Only for 63" Stand-Up with Ultra Cab
- 30162 N30162**
- 
- Sides Only for 63" Stand-Up with Ultra Cab (Pair)
- 30163-11 N30163-11**
- 
- 70" UltraCab Sleeper (3-piece kit)
- 30164 N30164**
- 
- Center Only for 70" Stand-Up with Ultra Cab
- 30162 N30162**
- 
- Sides Only for 70" Stand-Up with Ultra Cab (Pair)
- 30164-11 N30164-11**

### OVAL VIEW WINDOW TRIMS

Fits 330, 357, 359, 377, 378, 379, 385 (all aluminum cabs). Will not fit 387. [2005 & Earlier] (Each)


- With Flames
- D. 30150 N30150**
- 
- Blank
- E. 30102 N30102**

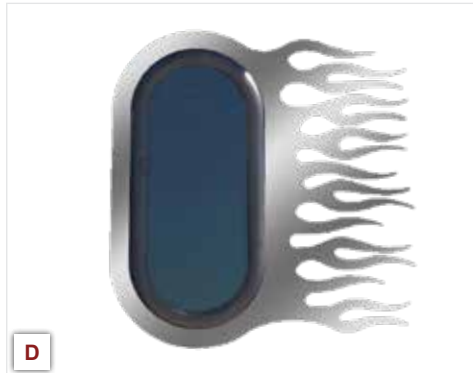

### RECTANGULAR VIEW WINDOW TRIMS

[2005 & Newer] (Each)

- With Flames
- F. 30151 N30151**
- 
- Blank
- G. 30152 N30152**

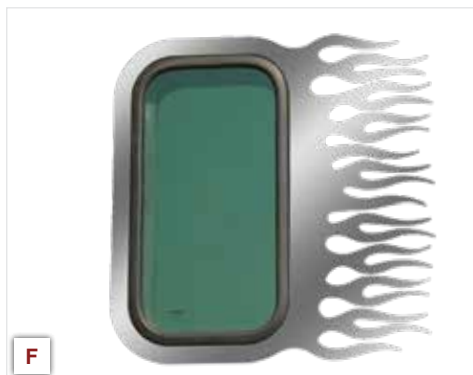



**SLEEPER ACCESSORIES**  
[2009 & Earlier] (Pair)

- Stack Guard Filler Trims
- B. 30156 N30156**

---

- Rear Vertical Wing Trim dimpled for rivets.  
Fits 36", 48" and 63" Unibilt Sleepers.
- C. 30051 N30051**

---

**ULTRA CAB SLEEPER ROOF TOP TRIM**

- 63" Stand-Up Sleeper With Ultra Cab (3-piece kit)
- D. 30163 N30163**

---

- Center Only for 63" Stand-Up with Ultra Cab
- 30162 N30162**

---

- Sides Only for 63" Stand-Up with Ultra Cab (Pair)
- 30163-11 N30163-11**

---

- 70" UltraCab Sleeper (3-piece kit)
- 30164 N30164**

---

- Center Only for 70" Stand-Up with Ultra Cab
- 30162 N30162**

---

- Sides Only for 70" Stand-Up with Ultra Cab (Pair)
- 30164-11 N30164-11**

---

**FLAT TOP CAB SLEEPER ROOF TOP TRIM**

- 63" Stand-Up Sleeper with Flat Top Cab (3-piece kit)
- 30161 N30161**

---

- Center Only for 63" Stand-Up with Flat Top Cab
- 30160 N30160**

---

- Sides Only for 63" Stand-Up with Flat Top Cab (Pair)
- 30161-11 N30161-11**

---

**IFTA STICKER BRACKETS (Pair)**

- IFTA Sticker Bracket - Narrow NEW
- E. 30030 N30030**

---

- IFTA Sticker Bracket - Wide NEW
- F. 30031 N30031**

---




**N** \*The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.