

VOLVO



VN AND VT DROP VISORS

17" Blind Mount Drop Visor	294
15" Blind Mount Drop Visor	293
Blind Mount Monster Drop Bow-Tie Visor	294
Blind Mount Regular Drop Bow-Tie Visor	294
17" Regular Mount Drop Visor	294
15" Regular Mount Drop Visor	294
Regular Mount Monster Drop Bow-Tie Visor	294
Regular Mount Regular Drop Bow-Tie Visor	294

VT 880 ACCESSORIES

Punched Grille Inserts	295
Punched Bumper Screens	295
Inner Fender Trims	295
Below Headlight Trims	295
Side Hood Stripe	295
Punched Intake Screens	295
Cab and Cowl	296
Sleeper Panels	296
Lower Sleeper Window	296
Upper Sleeper Window	296
Cab Door Handle Surround	296
Sleeper Turn Light Trim	296

VN GENERATION 2 ACCESSORIES

Louvered Replacement Grille	297
Side of Hood Behind Headlight Trim	297
Inner Fender Trim	297
Punched Intake Screen	297
Cab Panels	298
Sleeper Panels	298
Replacement Steps	298
Door Handle Trims	298

VN GENERATION 2 ACCESSORIES

Under Cab Door Scuff Kit	299
Front Upper Fairing Trim	299
Front Scuff Kit Between Steps	299
Front Lower Fairing Trim	299
Middle Upper Fairing Trim	299
Middle Lower Fairing Trim	299
Rear Upper Step Fairing Trim	299
Rear Upper Fairing Trim	299
Rear Scuff Kit Between Steps	299
Rear Lower Fairing Trim	299
Fuel Tank Fairings	299
Rear Frame Cover	299
2 Piece Rear Light Bar	299
24" Top Flap Accent	299
Anti-Sail Panels	299
24" Mud Flap Weights with Backs	299
Blank Rear Frame Cover	299

VN 630 ACCESSORIES

Low Roof Drop Visor	300
Cab Panels	300
Replacement Steps	300
Sleeper Panels	300
DPF Replacement Shield and Steps	300
Rear Frame Replacement Steps	300
Louvered Replacement Grille	301
Punched Intake Screen	301
Side of Hood Behind Headlight Trim	301
Inner Fender Trim	301
Deck Plate	301

VN AND VT DROP VISORS

Fits Mid-Roof VT series & Generation 2 VN Trucks. Fits VN and VT raised roof & mid roof. Does not fit Low Roof or Daycab. Does not fit 600 series trucks. Add 'ID' to your part number to have your lights in a 'Marker' pattern. (EX: 75049ID) [2004 & newer]

BLIND MOUNT

17" DROP VISOR

Blank (0)	75080	N75080
Supernova (7)	75081	N75081
Crew (7)	75083	N75083
A. Crew (5) ID Pattern	75083ID	N75083ID
2" Round Flat (9)	75084B	N75084B
2" Round Beehive (9)	75085B	N75085B
Challenger (9)	75089B	N75089B
Bulls-Eye (9)	75090B	N75090B
3/4" Button (9)	75090GB	N75090GB
Fusion (9)	75091BC	N75091BC
M1 (7)	75081M1	N75081M1
M3 (9)	75084M3	N75084M3
M5 (9)	75089M5	N75089M5
Mini (9)	75089MN	N75089MN

15" DROP VISOR (Factory Size)

Blank (0)	75100	N75100
Supernova (7)	75101	N75101
Crew (7)	75103	N75103
2" Round Flat (9)	75104B	N75104B
2" Round Beehive (9)	75105B	N75105B
Challenger (9)	75109B	N75109B
Bulls-Eye (9)	75110B	N75110B
3/4" Button (9)	75110GB	N75110GB
Fusion (9)	75111BC	N75111BC
M1 (7)	75101M1	N75101M1
M3 (9)	75104M3	N75104M3
M5 (9)	75109M5	N75109M5
Mini (9)	75109MN	N75109MN

BLIND MOUNT MONSTER DROP BOW-TIE

Blank (0)	75120	N75120
Supernova (7)	75121	N75121
Crew (7)	75123	N75123
2" Round Flat (9)	75124B	N75124B
2" Round Beehive (9)	75125B	N75125B
B. Challenger (9)	75129B	N75129B
Bulls-Eye (9)	75130B	N75130B
3/4" Button (9)	75130GB	N75130GB
Fusion (9)	75131BC	N75131BC
M1 (7)	75121M1	N75121M1
M3 (9)	75124M3	N75124M3
M5 (9)	75129M5	N75129M5
Mini (9)	75129MN	N75129MN

BLIND MOUNT REGULAR DROP BOW-TIE

Blank (0)	75140	N75140
Supernova (7)	75141	N75141
Crew (7)	75143	N75143
2" Round Flat (9)	75144B	N75144B
2" Round Beehive (9)	75145B	N75145B
Challenger (9)	75149B	N75149B
Bulls-Eye (9)	75150B	N75150B
3/4" Button (9)	75150GB	N75150GB
Fusion (9)	75151BC	N75151BC
M1 (7)	75141M1	N75141M1
M3 (9)	75144M3	N75144M3
M5 (9)	75149M5	N75149M5
Mini (9)	75149MN	N75149MN

See page 300 for VN Low Roof.



STANDARD MOUNT

17" DROP VISOR

Blank (0)	75000	N75000
Supernova (7)	75001	N75001
Crew (7)	75003	N75003
2" Round Flat (9)	75004B	N75004B
2" Round Beehive (9)	75005B	N75005B
Challenger (9)	75009B	N75009B
Bulls-Eye (9)	75010B	N75010B
3/4" Button (9)	75010GB	N75010GB
Fusion (9)	75011BC	N75011BC
M1 (7)	75001M1	N75001M1
M3 (9)	75004M3	N75004M3
M5 (9)	75009M5	N75009M5
Mini (9)	75009MN	N75009MN

15" DROP VISOR (Factory Size)

Blank (0)	75020	N75020
Supernova (7)	75021	N75021
Crew (7)	75023	N75023
2" Round Flat (9)	75024B	N75024B
2" Round Beehive (9)	75025B	N75025B
Challenger (9)	75029B	N75029B
Bulls-Eye (9)	75030B	N75030B
3/4" Button (9)	75030GB	N75030GB
Fusion (9)	75031BC	N75031BC
M1 (7)	75021M1	N75021M1
M3 (9)	75024M3	N75024M3
M5 (9)	75029M5	N75029M5
Mini (9)	75029MN	N75029MN

MONSTER DROP BOW-TIE

Blank (0)	75040	N75040
Supernova (7)	75041	N75041
Crew (7)	75043	N75043
2" Round Flat (9)	75044B	N75044B
2" Round Beehive (9)	75045B	N75045B
Challenger (9)	75049B	N75049B
Bulls-Eye (9)	75050B	N75050B
3/4" Button (9)	75050GB	N75050GB
Fusion (9)	75051BC	N75051BC
M1 (7)	75041M1	N75041M1
M3 (9)	75044M3	N75044M3
M5 (9)	75049M5	N75049M5
Mini (9)	75049MN	N75049MN

REGULAR DROP BOW-TIE

Blank (0)	75060	N75060
Supernova (7)	75061	N75061
Crew (7)	75063	N75063
2" Round Flat (9)	75064B	N75064B
2" Round Beehive (9)	75065B	N75065B
Challenger (9)	75069B	N75069B
Bulls-Eye (9)	75070B	N75070B
3/4" Button (9)	75070GB	N75070GB
Fusion (9)	75071BC	N75071BC
M1 (7)	75061M1	N75061M1
M3 (9)	75064M3	N75064M3
M5 (9)	75069M5	N75069M5
Mini (9)	75069MN	N75069MN




VOLVO VT 880 HOOD ACCESSORIES

- C.** **1** - Punched Grille INSERT (Each)
 Replace **XX** with punch option number from below.
75400-XX N75400-XX
-
- 2** - Punched Bumper Screen (Each)
75450-XX N75450-XX
-
- D.** **1** - Inner Fender Trim (Pair)
 Tape mount
70100 N70100
-
- 2** - Below Headlight Trim (Pair)
 Tape mount
70101 N70101
-
- 3** - Side Hood Stripe (Pair)
70102 N70102
-
- 4** - Punched Intake Screen (Pair)
 Replace **XX** with punch option number below.
70300-XX N70300-XX

PUNCH OPTIONS

View punch styles inside back cover.

- | | |
|-----|-------------------------|
| -23 | Small 1/4" Circles |
| -24 | Large 7/16" Circles |
| -28 | Hexagons |
| -30 | Horizontal Rectangles |
| -31 | Vertical Rectangles |
| -32 | 5/16" In-Line Squares |
| -33 | 5/16" Offset Squares |
| -37 | Vertical Ovals |
| -38 | Horizontal 3/16" Oblong |
| -39 | Vertical 3/16" Oblong |
| -40 | Horizontal 5/16" Oblong |
| -41 | Vertical 5/16" Oblong |
| -46 | Stars |
| -47 | Snake Skin |

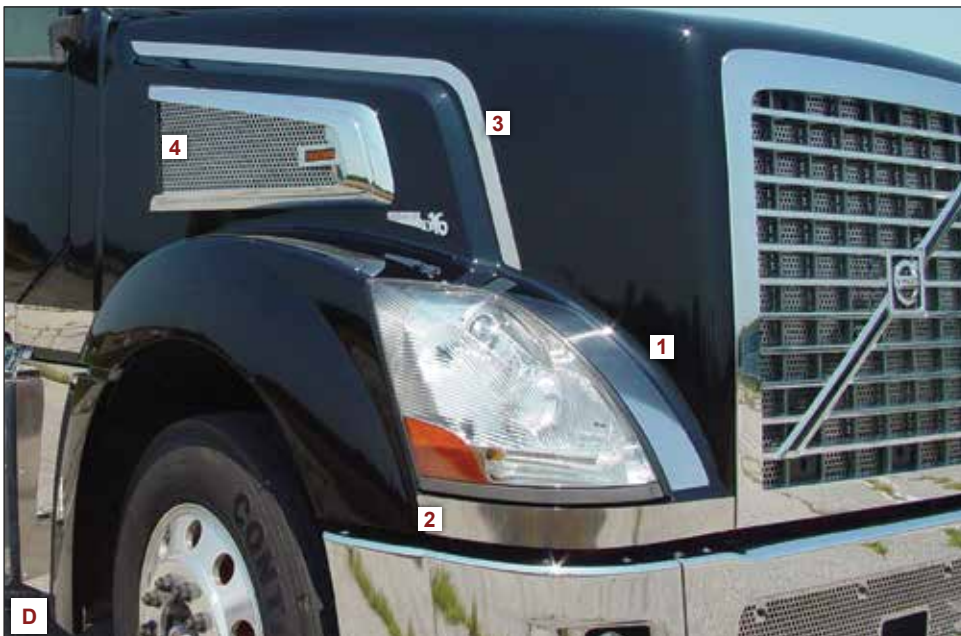

See page 382 for information on ordering Millennium Glo Series lights on any RoadWorks lighted part.

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

VT 880 CAB, COWL AND SLEEPER PANELS

- A. 1 - Cab And Cowl**
 26 Challenger Lights and Bezels (Kit)
76509B-02 N76509B-02
-
- 2 - Sleeper Panels**
 20 Challenger Lights and Bezels (Pair)
77009B N77009B
-
- 3 - Lower Sleeper Window Trim**
 (Pair)
70150 N70150
-
- 4 - Upper Sleeper Window Trim**
 (Pair)
70151 N70151

CAB AND COWL (Kit)

Blank (0)	76500-02	N76500-02
Supernova (16)	76501-02	N76501-02
Crew (16)	76503-02	N76503-02
2" Round Flat (26)	76504-02B	N76504-02B
2" Round Beehive (26)	76505-02B	N76505-02B
Challenger (26)	76509-02B	N76509-02B
Bulls-Eye (26)	76510-02B	N76510-02B
3/4" Button (26)	76510-02GB	N76510-02GB
Fusion (26)	76511-02BC	N76511-02BC
M1 (16)	76501M1-02	N76501M1-02
M3 (26)	76504M3-02	N76504M3-02
M5 (26)	76509M5-02	N76509M5-02
Mini (26)	76509MN-02	N76509MN-02

77" SLEEPER PANELS (Pair)

Blank (0)	77000	N77000
Supernova (10)	77001	N77001
Crew (10)	77003	N77003
2" Round Flat (20)	77004B	N77004B
2" Round Beehive (20)	77005B	N77005B
Challenger (20)	77009B	N77009B
Bulls-Eye (20)	77010B	N77010B
3/4" Button (20)	77010GB	N77010GB
Fusion (20)	77011BC	N77011BC
M1 (10)	77001M1	N77001M1
M3 (20)	77004M3	N77004M3
M5 (20)	77009M5	N77009M5
Mini (20)	77009MN	N77009MN

OPTIONAL FUEL FILL ACCESS DOOR

For information about different fuel fill locations please call RoadWorks customer service at 1-800-448-8741.



CAB AND SLEEPER TRIMS (Pair)

- B. 1 - Cab Door Handle Surrounds**
70000 N70000
-
- 2 - Sleeper Turn Light Trim**
70155 N70155





GENERATION 2 [2004 & NEWER] VN HOOD ACCESSORIES

- C.** Louvered Replacement Grille (Kit)
75407 N75407

- D.** 1 - Side Of Hood Behind Headlight Trim (Pair)
70105 N70105


- 2 - Inner Fender Trim Tape mount
70106 N70106

- 3 - Punched Intake Screen
Replace **XX** with punch option number below.
(Pair)
70305-XX N70305-XX

PUNCH OPTIONS

View punch styles inside back cover.

- 23 Small 1/4" Circles
- 24 Large 7/16" Circles
- 28 Hexagons
- 30 Horizontal Rectangles
- 31 Vertical Rectangles
- 32 5/16" In-Line Squares
- 33 5/16" Offset Squares
- 36 Horizontal Oval Holes
- 37 Vertical Ovals
- 38 Horizontal 3/16" Oblong
- 39 Vertical 3/16" Oblong
- 40 Horizontal 5/16" Oblong
- 41 Vertical 5/16" Oblong
- 46 Stars
- 47 Snake Skin

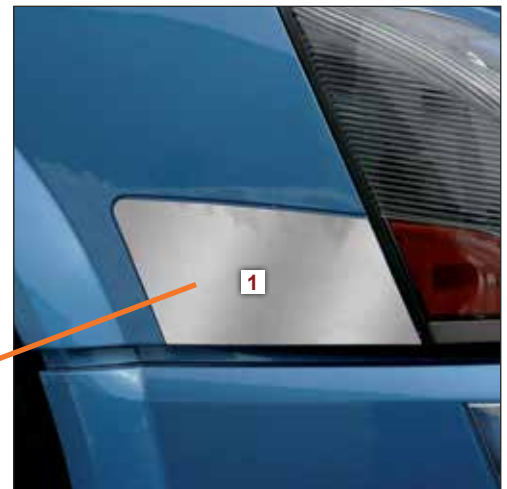

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

GENERATION 2 VN CAB AND SLEEPER PANELS

[2004 & Newer] (Pair)

CAB PANELS

Blank (0)	76520	N76520
Supernova (6)	76521	N76521
A. Crew (6)	76523	N76523
Challenger (10)	76529B	N76529B
Bulls-Eye (10)	76530B	N76530B
3/4" Button (10)	76530GB	N76530GB
M1 (6)	76521M1	N76521M1
M3 (10)	76524M3	N76524M3
M5 (8)	76529M5	N76529M5
Mini (10)	76529MN	N76529MN

SLEEPER PANELS + EXTENSIONS

Blank (0)	77040	N77040
Supernova (14)	77041	N77041
B. Crew (14)	77043	N77043
Challenger (24)	77049B	N77049B
Bulls-Eye (24)	77050B	N77050B
3/4" Button (24)	77050GB	N77050GB
M1 (14)	77041M1	N77041M1
M3 (24)	77044M3	N77044M3
M5 (20)	77049M5	N77049M5
Mini (24)	77049MN	N77049MN

GENERATION 2 VN REPLACEMENT STEPS

[2004 & Newer] (Each)

C. Cab Entry Steps 28.5" long.	74000	N74000
D. 1 - Rear Top Fairing Step 16.5" long.	74001	N74001
2 - Inner Bottom Rear Step 13.5" long.	74002	N74002

VOLVO VT / VN DOOR HANDLE TRIMS

(Pair)



E. 1 - Cab Door Handle Surrounds	70000	N70000
2 - Cab Door Handle Covers	70001	N70001
Sleeper Door Handle Trim		
F. 74009	N74009	

VOLVO SLEEPER VENT TRIMS

(Each)

Volvo Sleeper Vent Cover	70800	N70800
--------------------------	--------------	---------------

To keep your equipment looking great use RoadWorks Detail Products, seen on pages 314-317.

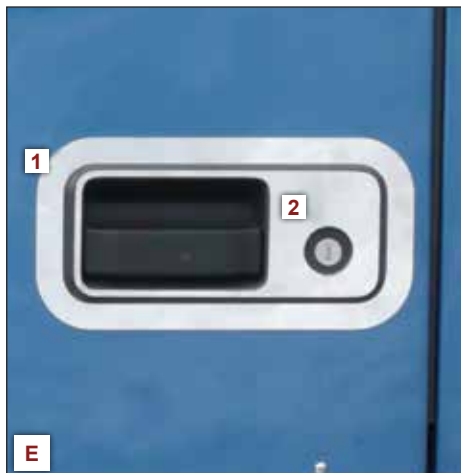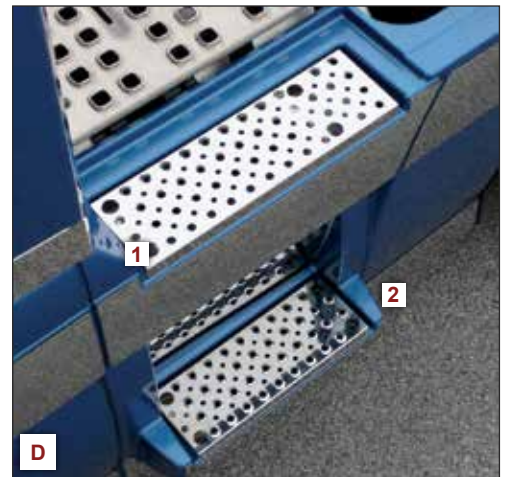



GENERATION 2 VN 730 FAIRING TRIMS (Pair)

- G. 1 - Under Cab Door Scuff Kit**
72000 N72000
- 2 - Front Upper Fairing Trim**
72001 N72001
- 3 - Front Scuff Kit Between Steps**
72008 N72008
- 4 - Front Lower Fairing Trim**
72005 N72005
- 5 - Middle Upper Fairing Trim**
64.69" Long
72002 N72002
- 6 - Middle Lower Fairing Trim**
64.69" Long
72006 N72006
- 7 - Rear Upper Step Fairing Trim**
72003 N72003
- 8 - Rear Upper Fairing Trims**
72004 N72004
- 9 - Rear Scuff Kit Between Steps**
72009 N72009
- 10 - Rear Lower Fairing Trim**
72007 N72007




FUEL TANK FAIRINGS

- H.** Call us with your dimensions to have custom fuel tank fairings made for your truck at 1-800-448-8741.

REAR ACCESSORIES

- I. 1 - Custom Rear Frame Cover**
Call **RoadWorks** Customer Service at 1-800-448-8741 for details.
- 2 - Rear Center Panel**
See the Universal section for options.
- 3 - 1-piece Light Bar**
See the Universal section for options.

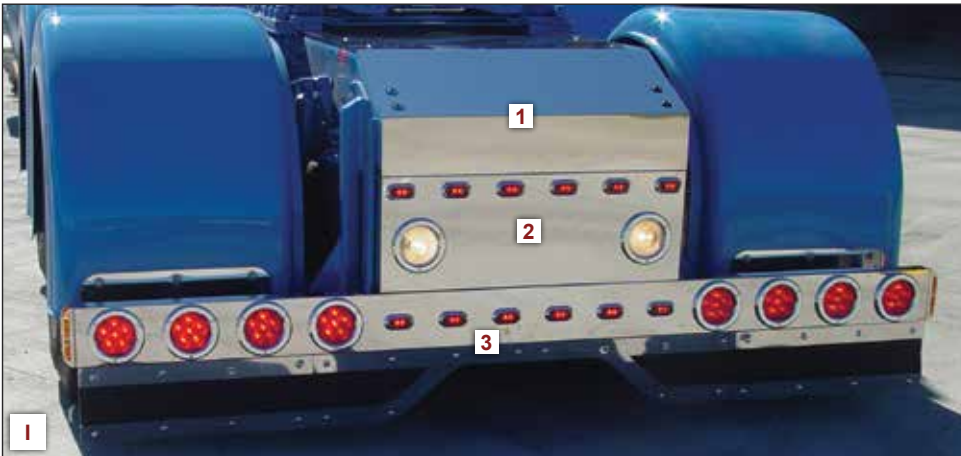

REAR ACCESSORIES

- J. 1 - Rear Frame Cover For Volvo**
With stop/turn/tail replacement lights and bezels.
(Each)
70610BC N70610BC
- 2 - 2-piece Rear Light Bar**
(6) clear Oval lights and bezels.
(Pair)
10776BC N10776BC
- 3 - 24" Top Flap Accent**
(Pair)
10426 N10426
- 4 - Anti-Sail Panels**
(Pair)
10400 N10400
- 5 - 24" Mud Flap Weights With Backs**
(Pair)
10424 N10424
- Blank Rear Frame Cover For Volvo
70611 N70611



See pages 346 - 354 for more Rear Center Panel options.

See pages 355 - 363 for more Rear Light Bar options.

See pages 363 - 367 for more Flap Accessories.

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.

VN 630 LOW ROOF DROP VISOR [2004 & Newer]
Does not fit Raised Roof, Mid Roof, or Daycab.

14" BLIND MOUNT DROP VISOR

Blank (0)	75280	N75280
Supernova (7)	75281	N75281
Crew (7)	75283	N75283
2" Round Flat (9)	75284B	N75284B
2" Round Beehive (9)	75285B	N75285B
Challenger (9)	75289B	N75289B
Bulls-Eye (9)	75290B	N75290B
3/4" Button (9)	75290GB	N75290GB
Fusion (9)	75291BC	N75291BC
M1 (7)	75281M1	N75281M1
M3 (9)	75284M3	N75284M3
M5 (9)	75289M5	N75289M5
A. M5 (5) ID Pattern	75289ID	N75289ID
Mini (9)	75289MN	N75289MN



VN 630 CAB PANEL (Pair)

Blank (0)	
Supernova (7)	
Crew (7)	
2" Round Flat (9)	
2" Round Beehive (9)	
Challenger (9)	
Bulls-Eye (9)	
Fusion (9)	
M1 (7)	
M3 (9)	
B. 1 - M5 (9)	
Mini (9)	

To order with these lighting options, call RoadWorks Customer Service at 1-800-448-8741.



REPLACEMENT BATTERY BOX LID WITH STEPS (Reuses factory hardware) (Each)

2 - Battery Box Lid with steps	
74900	N74900

VN 630 SLEEPER PANEL (Pair)

Blank (0)	
Supernova (7)	
Crew (7)	
2" Round Flat (9)	
2" Round Beehive (9)	
Challenger (9)	
Bulls-Eye (9)	
Fusion (9)	
M1 (7)	
M3 (9)	
C. 1 - M5 (9)	
Mini (9)	

Please provide your fuel fill location when you call RoadWorks Customer Service at 1-800-448-8741 to place your order.




VN 630 DPF REPLACEMENT SHIELD AND STEPS (Each)

DPF Replacement Shield and Steps	
D. 74910	N74910

REAR FRAME REPLACEMENT STEPS

Replaces all 13.75" wide step models. Reuses factory side gussets. (Each)

Rear Frame Replacement Steps	
E. 74920	N74920

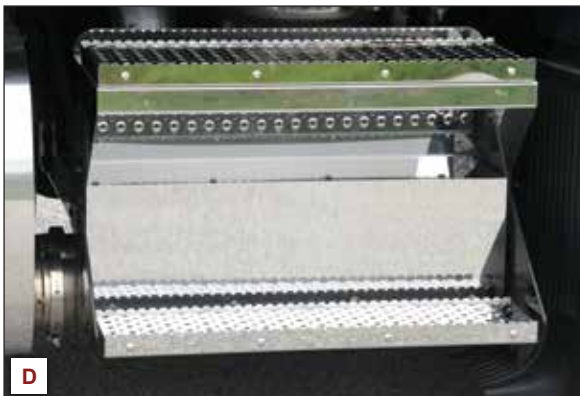



GENERATION 2 [2004 & NEWER] VN HOOD ACCESSORIES

Louvered Replacement Grille (Kit)

F. 75407 N75407

G. 1 - Punch Intake Screen
Replace **XX** with punch option number below.
(Pair)

70305-XX N70305-XX

PUNCH OPTIONS

View punch styles inside back cover.

-23	Small 1/4" Circles
-24	Large 7/16" Circles
-28	Hexagons
-30	Horizontal Rectangles
-31	Vertical Rectangles
-32	5/16" In-Line Squares
-33	5/16" Offset Squares
-36	Horizontal Oval Holes
-37	Vertical Ovals
-38	Horizontal 3/16" Oblong
-39	Vertical 3/16" Oblong
-40	Horizontal 5/16" Oblong
-41	Vertical 5/16" Oblong
-46	Stars
-47	Snake Skin



2 - Side Of Hood Behind Headlight Trim
(Pair)

70105 N70105

Inner Fender Trim
Tape mount

H. 70106 N70106

I. DECK PLATES
(Each)



See page 343 in the Universal Section for information to order the correct size deck plate for your truck.

N *The part numbers beginning with 'N' in the right-sided column designate 304 stainless material. 304 stainless has enhanced corrosion resistance.