

# 13.5" Drop Visor & Monster Drop Bow-Tie Visor for Classic Flat Top with Cab Mounted Mirrors, 1995 & Newer

*Replaces factory stainless steel visor only. Not compatible with fiberglass visor.*

**Part number 25020, 25020L, 25021**

Before beginning the installation of your new RoadWorks® visor please check your truck's mirror bracket to see that it is mounted to the cab (see diagram below). If your mirror brackets are mounted to the door, then you do not have the correct visor for your truck. Call RoadWorks® Manufacturing, Inc. at 1-800-448-8741 for assistance in determining the correct part number. Please have the model, year, and bracket location of your truck's mirror ready when calling.



Cab Mounted Mirror




Door Mounted Mirror

**PLEASE READ THE DIRECTIONS COMPLETELY BEFORE BEGINNING.**

## Installation

1. Remove factory visor skins. Set aside the hardware that you removed from the sides of the visor.
2. Remove the top bracket from all four cab-mounted factory brackets. Do not remove the brackets that are riveted to the cab (see diagram below).
3. Peel the PVC film from all -14 and -16 brackets. Install one -14 bracket and one -16 bracket on either side of each cab-mounted factory bracket using 2½" carriage bolts, flat washers, lock washers, and hex nuts (see Diagram #4 on reverse side). Do not fully tighten these bolts.
4. Install each visor skin using twelve ¾" carriage bolts, flat washers, lock washers, and hex nuts. Do not fully tighten these bolts. For convenience peel the PVC away from the center joint only.
5. With both skins in place join them together at the center using three ¾" hex bolts, flat washers, lock washers, and hex nuts. Fully tighten the center bolts only.
6. Partially install the bolts on the sides of the visor to the cab using the hardware set aside in step #1. **Important: Do not fully tighten these bolts!**
7. Fully tighten the carriage bolts that hold each visor skin to the brackets (from step #4).
8. Fully tighten the carriage bolts that secure the brackets from step #3.
9. Fully tighten the side bolts from step #6.
10. Peel PVC film from visor skins. This completes the installation.

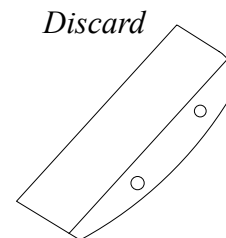

**Top Factory Brackets**




**Cab-Mounted Factory Brackets**

# 13.5" Drop Visor & Monster Drop Bow-Tie Visor for Classic Flat Top with Cab Mounted Mirrors, 1995 & Newer


*Replaces factory stainless steel visor only. Not compatible with fiberglass visor.*

DIAGRAM #1

## HARDWARE



3/4" CARRIAGE BOLT



3/4" HEX BOLT



2 1/2" CARRIAGE BOLT



FLAT WASHER



LOCK WASHER



HEX NUT

DIAGRAM #2

## VISOR SKINS



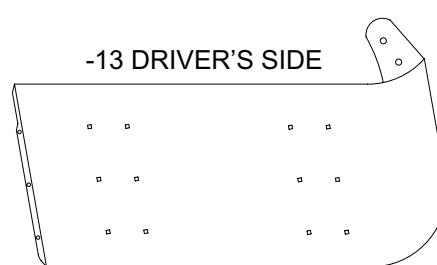



DIAGRAM #3

## BRACKETS

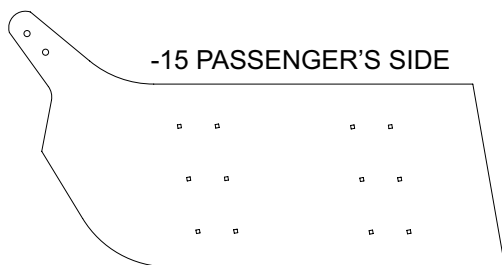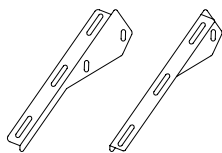


-16

-14

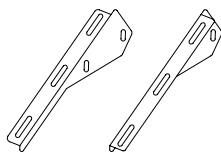


-16

-14

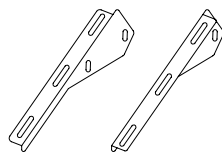

-16

-14

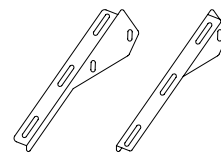

-16

-14

DIAGRAM #4

## BRACKET INSTALLATION

