

Kenworth T800 Grill with 17 Vertical Bars, 1995 & Newer

Part number 45300

Before beginning the installation of your new RoadWorks® grill please verify using the box label that the grill you have purchased is for your year and model of truck. Please note, this T800 replacement grill is not compatible with a grill denser. If the year or model of your truck does not match the description on the box label, call RoadWorks® Manufacturing, Inc. at 1-800-448-8741.

HARDWARE



PLEASE READ THE DIRECTIONS COMPLETELY BEFORE BEGINNING.

Installation

1. Arrange the grill bars and surround pieces on a flat surface as follows: -01 are the grill bars, -14 is the upper grill piece, -16 is the lower grill piece, -13 is the driver's side surround, -15 is the passenger's side surround. Make sure you have the correct number of grill bars for the tabs on the surround. You should also have two -02 side retaining strips and one -03 lower retaining strip.
2. Carefully remove the factory surround, factory wire screen, factory inner grill, and factory upper/inner brace (see Diagram #1 below). The factory wire screen and the factory upper/inner brace will be reinstalled behind the replacement grill later.
3. Peel the PVC film from the -14 upper grill piece, -16 lower grill piece, -13 driver's side surround, and the -15 passenger's side surround.

Diagram #1


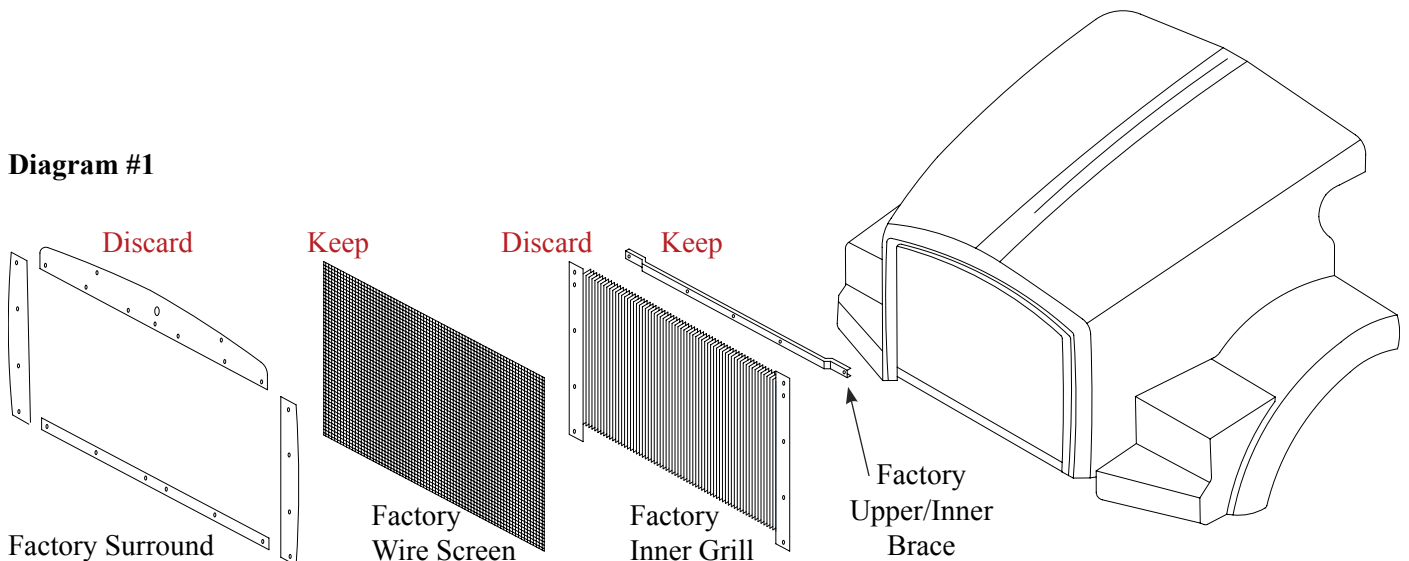


Diagram #2



4. Install the -14 upper grill piece, -16 lower grill piece, -13 driver's side surround, -15 passenger's side surround using 1/4" carriage bolts, 1/4" flat washers, 1/4" lock washers, and 1/4" hex nuts in the holes of the surround which are indicated in red in Diagram #2 above. Do not fully tighten these bolts.
5. Peel the PVC film from the bolt holes at the ends of the -01 grill bars.
6. Install the far left and far right -01 grill bars using 3/16" carriage bolts, 3/16" flat washers, and 3/16" lock nuts. Fully tighten these bolts.
7. Fully tighten the hardware holding the surround pieces in place which was installed in step #3.
8. Install the remaining -01 grill bars using 3/16" carriage bolts, 3/16" flat washers, and 3/16" lock nuts. Fully tighten these bolts.
9. Open the hood and place the factory wire screen on the back side of the replacement grill, the holes in the factory wire screen should go over the recently installed bolts from step #4.
10. Reinstall the factory upper/inner brace using 1/4" carriage bolts, 1/4" flat washers, and 1/4" lock nuts in the four center holes of -14 upper grill piece. Note: the carriage bolts should pass through the -14 upper grill piece, the factory wire screen, and the factory upper/inner brace. Fully tighten these bolts.
11. Install 1/4" flat washers and 1/4" lock nuts on the two outside bolts of the -14 upper grill piece from step #4. Fully tighten these bolts.
12. Peel the PVC film from the two -02 side retaining strips and the -03 lower retaining strip.
13. Install the two -02 side retaining strips over the bolts installed in step #4 using 1/4" flat washers and 1/4" lock nuts. Fully tighten these bolts.
14. Install the -03 lower retaining strip over the bolts installed in step #4 using 1/4" flat washers and 1/4" lock nuts. Fully tighten these bolts.
15. Peel the remaining PVC film from your grill. This completes the installation of your new RoadWorks® grill.

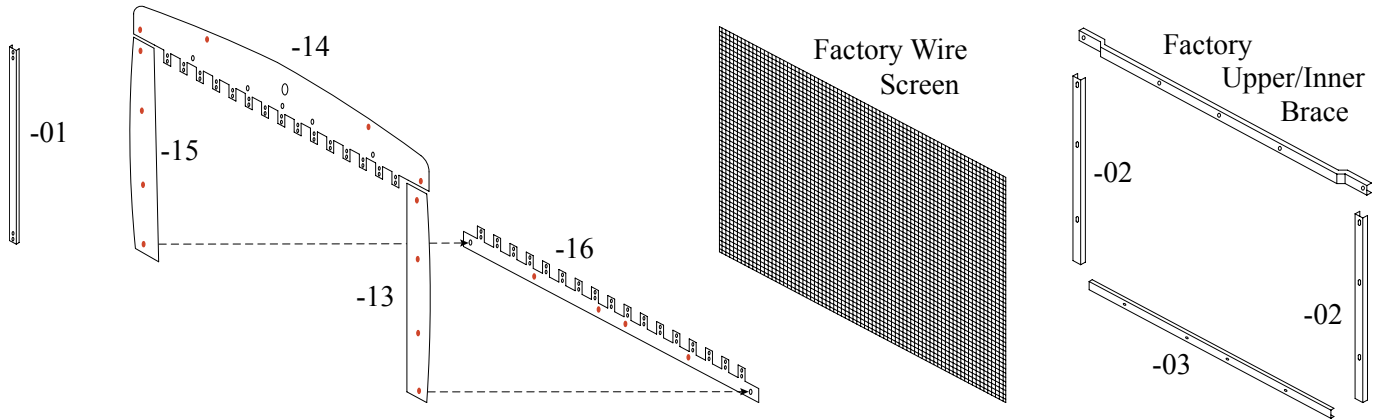

45300 KW T800 Replacement Grill
with 17 Vertical Bars, 1995 & Newer

*Thank you for choosing RoadWorks
stainless steel accessories!*