

International Day Cab Rear Window Drop & Bow-Tie Visor

Part number 55400, 55400L, 55401

Before beginning the installation of your new RoadWorks[®] rear window visor please verify the size of your truck's rear window is 37" X 20". If your rear window does not match these dimensions, then you may not have the correct part. Call RoadWorks[®] Manufacturing, Inc. at 1-800-448-8741 for assistance in determining the correct part number. Please have the model, year, and size of the rear window of your truck ready when calling.


PLEASE READ THE DIRECTIONS COMPLETELY BEFORE BEGINNING.

Installation


1. Remove the PVC film from all four brackets. Do **NOT** remove the PVC film from the visor skins until step #7.
2. Using $\frac{3}{4}$ " hex bolts, flat washers, lock washers, and hex nuts join the left and right visor skins (-13 and -15) together at the center. For your convenience, peel the PVC film away from the center mounting lips only.
3. Attach the 35400-01, 35400-14, and 35400-16 brackets to the back of the visor skins using $\frac{3}{4}$ " carriage bolts, flat washers, lock washers, and hex nuts. Do not fully tighten these bolts.
4. Hold the assembled visor up to the window in the desired location (see Diagram #3). Mark the holes through the oval slots for drilling.
5. Drill $\frac{1}{2}$ " holes on the marked locations, being careful not to damage the interior of the cab or sleeper.
6. Install the assembled visor over the window using the provided $1\frac{1}{4}$ " hex bolts, flat washers, lock washers, and 1" neoprene well nuts (see Diagram #2). Fully tighten these six bolts, then tighten the remaining bolts from step #3.
7. Peel the PVC film from the visor skins. This completes the installation.

International Day Cab Rear Window Drop & Bow-Tie Visor


Hardware

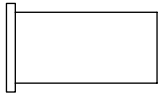


1" Neoprene Well Nut

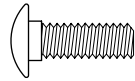

3/4" Carriage Bolt



1 1/4" Hex Bolt



3/4" Hex Bolt



Lock Washer



Flat Washer



Hex Nut

Diagram #1


Brackets




35400-01



35400-01

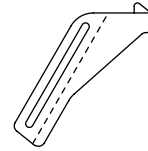


35400-16

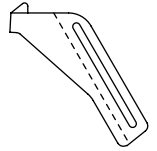


35400-14

Visor Skins

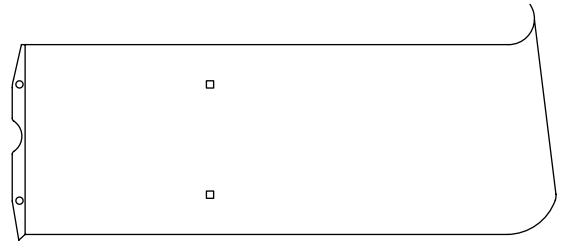


55400-15

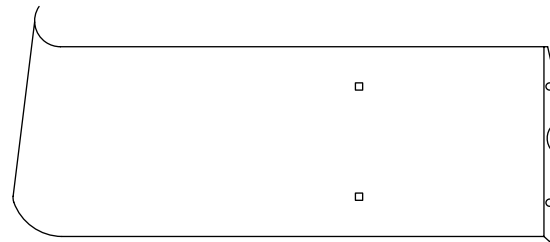

55400-13

Diagram #2



Mounting Bracket

Diagram #3

